


③ CH1, Steering wheel CH1 转向轮





④ CH2, Throttle trigger CH2 油门

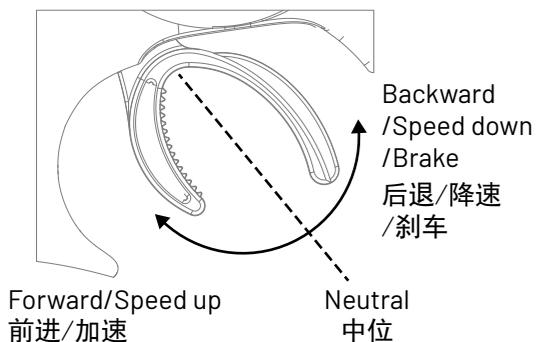

Note:
When using the transmitter in electric powered vehicles, the throttle trigger should always remain in the neutral position. Otherwise the vehicle may experience erratic operation of the throttle trigger functions.

注意：在电动车辆中使用遥控器时，油门应始终保持在中位。否则，可能会因油门的功能导致车辆不稳定。

Receiver 接收器

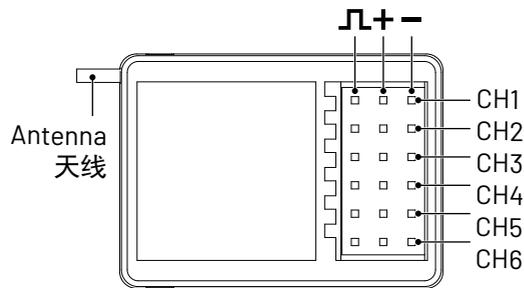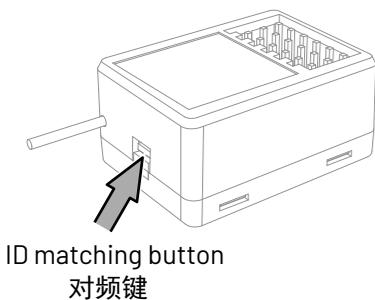

Frequency matching 对频

After changing the transmitter

The transmitter should be turned on first, press and hold the code key of the receiver for 3 seconds, the indicator light will flash to indicate that it enters the code matching mode, and the receiver will automatically look for the nearest remote-control signal, the indicator light will be on after the code matching is successful.

更换遥控器后

遥控器先开机，按住接收机上面的对频键3秒，指示灯快闪表示进入对频模式，接收机自动寻找最近的遥控器信号，对频成功后指示灯常亮。



Before installing and operating your new radio system, please take a few minutes to familiarize yourself with the various features of the system by reading this instruction manual thoroughly.

在安装和操作您的新无线电系统之前，请花几分钟时间通过仔细阅读本说明书来熟悉系统的各种功能。

SAFETY PRECAUTIONS 安全注意事项

This product is a sophisticated hobby product and not a toy. It must be operated with caution and common sense and requires some basic mechanical ability. Failure to operate this product in a safe and responsible manner could result in injury or damage to the product or property. This product is not intended to be used by children without direct adult supervision. It is essential to read and follow all instructions and warnings found in this manual prior to installation, set up, and use, in order for the product to operate properly and to avoid damage or injury.


本产品是一种精密的电子产品，而不是玩具。必须谨慎和常识性地操作，并需要一些基本的机械能力。未能以安全和负责任的方式操作本产品可能会导致产品或财产受到伤害或损坏。本产品不得在无成人直接监督的情况下由儿童使用。在安装、设置和使用之前，必须阅读并遵循本手册中所有说明和警告，以便产品正常运行并避免损坏或伤害。

TRANSMITTER DATA 遥控器参数

Model: X4EM-150	Frequency Band: 2.4GHz
Input Power: 1.5V AA×4	Channels: 4
型号: X4EM-150	频率: 2.4GHz
输入电源: 1.5V AA×4	通道: 4



⑤ Lanyard hole
挂绳孔

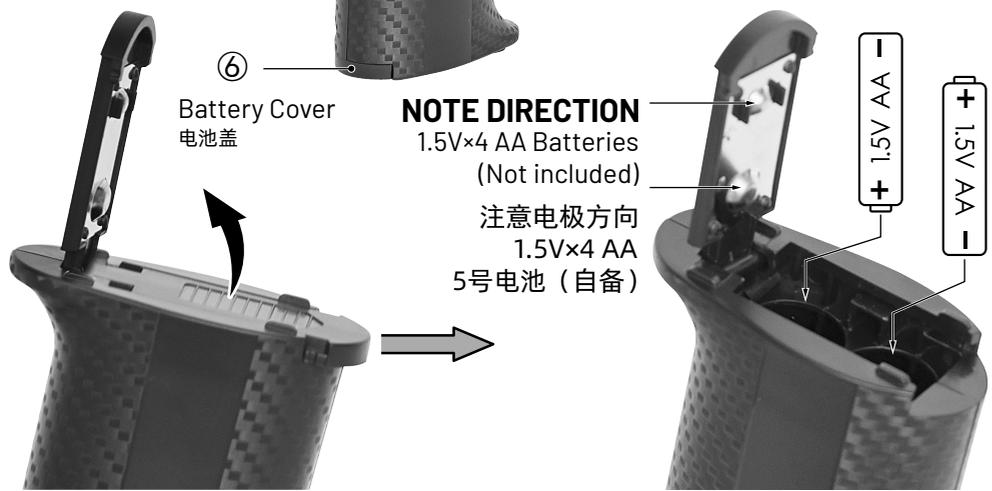


⑥ Battery Cover
电池盖

NOTE DIRECTION
1.5V×4 AA Batteries
(Not included)
注意电极方向
1.5V×4 AA
5号电池 (自备)

Open battery cover at the bottom of transmitter. Install batteries.
Follow the direction of batteries designated in the inside of the battery box.
打开遥控器底部的电池盖，按照电池盒内指定的电池极性方向正确安装电池。

① Regulatory interface 调节界面

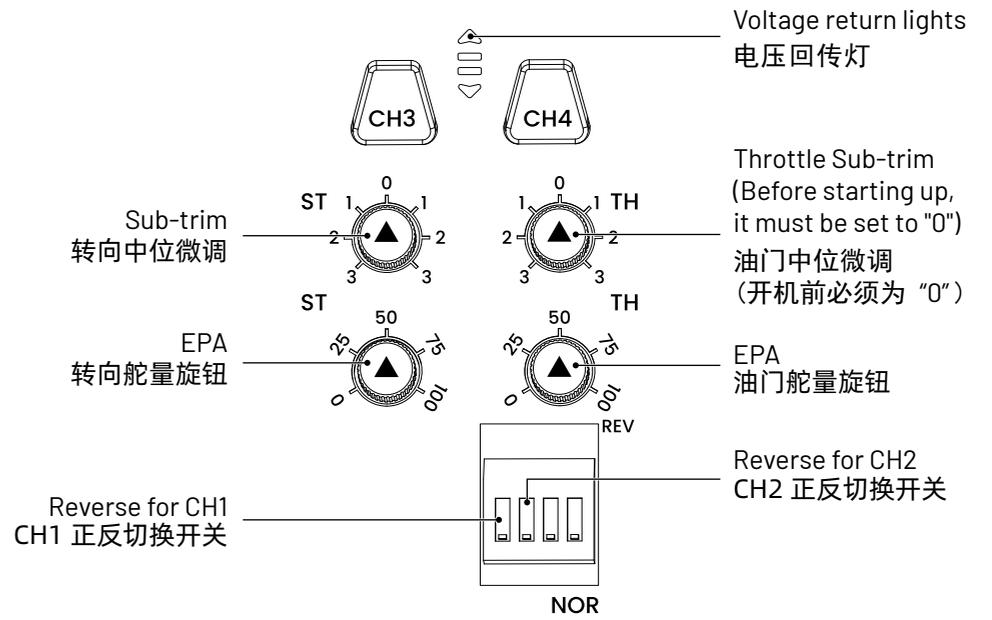

The steering rudder amount is recommended to be controlled within 75% to avoid excessive steering resulting in friction between the front wheel and the car shell, and the appropriate steering range can better maintain the body attitude and control comfort.
Voltage return lights: 3 green lights and 1 red light, indicating 100%, 75%, 50%, and 25% power respectively, only available on receivers support voltage return.

转向舵量建议控制在75%以内，避免过大转向导致前轮与车壳发生摩擦而产生磨损，合适的舵量范围能更好地保持车身姿态与操控舒适性。
电压回传灯：3个绿色灯，1个红色灯，分别代替100%、75%、50%、25%电量，在有电压回传的接收机上才有此功能。

② Power switch 电源开关



Short press (< 1 second) to turn ON,
Press and hold (< 2 seconds) to turn OFF.
短按 (<1秒) 开启，长按 (<2秒) 关闭。

Please make sure the transmitter throttle trigger and Steering wheel to normal before starting up. Do not touch the throttle trigger when turning on the power of the transmitter. Blue light is always, light is alternately on and off for low voltage alarm.

开机前确认遥控器的油门扳机、方向盘回位正常。开启遥控器电源时禁止触碰油门扳机。蓝色灯常亮，低压报警指示灯交替亮和灭。