


1/7比例后直桥沙漠短卡

1:7 SCALE DESERT FIGHTER SHORT COURSE

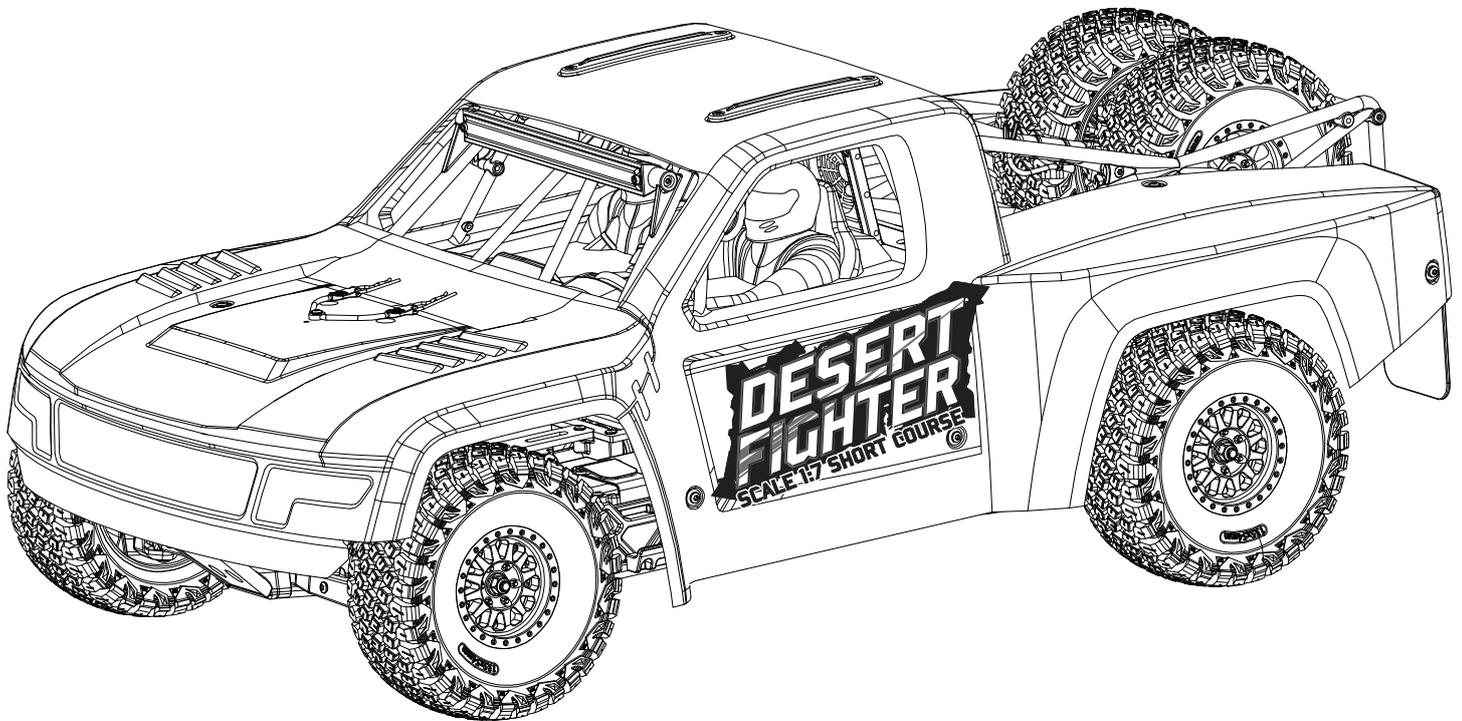

感谢您购买我们的产品！祝您玩的开心，为了获的最佳产品性能体验，请在使用前务必认真阅读说明书。

Thank you for your purchasing. Before operating this vehicle, please read manual materials thoroughly. This manual contains all the necessary set-up and operating procedures that allow you to unlock the performance.

目录.....	1
操作说明和注意事项.....	2~6
爆炸图.....	7-17
配件表.....	18~24

Table of Contents.....	1
Instructions and Precautions.....	2~6
Explode Diagram.....	7-17
Parts List.....	18~24

安全注意事项

SAFETY PRECAUTIONS AND WARNINGS

年龄建议：不适合14岁以下儿童。这不是玩具。

Age Recommendation: Not for children under 14 years. This is not a toy.

- 1) 严禁在公共场所或拥挤的地方操作模型车, 本产品不允许儿童在没有成人直接监督下使用。
Never operate the model in public places and the street or in populated areas for any reason. This product is not intended for use by children without direct adult supervision.
- 2) 严禁反接电池或拆解电池, 这是危险的, 并可能引起火灾。
Never reverse install the battery or disassemble the battery, which is dangerous and may cause a fire.
- 3) 本产品包含细小且锋利的零件, 请将任何化学品、小零件和电子设备放在儿童接触不到的地方。
This product contains small and sharp parts, keep all chemicals, small parts and anything electrical out of the reach of children.
- 4) 当不使用模型车时, 请先断开电源并把电池从车身移出。此外遥控器电源关闭后, 应取出电池以免漏液。
When not use the vehicle, power OFF the vehicle and then the transmitter. Unplug the battery and remove it from the vehicle. Also remove the transmitter battery to avoid leakage.
- 5) 请不要混用新旧或不同类型电池。
Please do not mix old and new batteries or different types of batteries.
- 6) 不要在遥控器电池电量低的情况下操作车子, 如果电池电量过低, 请更换电池。
Never operate your model with low transmitter batteries. Replace batteries when vehicle batteries are low.
- 7) 在开机状态下, 切勿拆卸遥控器电池。
Never remove the transmitter batteries while the model is powered ON.
- 8) 请根据当地有关规定, 妥善弃置或回收电池。
Dispose of used batteries according to national regulations.
- 9) 充电时, 请从模型车中取出电池, 如果电池变形, 请不要使用。
When charging the battery, please take out the battery from the vehicle. If the battery is deformed, please do not use it.
- 10) 电池应在成人监督下充电, 无人看管时请勿给电池充电。
The battery should be charged under adult supervision, do not charge the battery when unattended.
- 11) 遥控系统有各种不同功能和设置, 初次接触前请确保对所有功能设置完全理解, 未能正确操作可能导致产品损坏。
The radio system has different functions and settings, please read the entire manual to gain a full understanding of functions, failure to operate correctly could result in product malfunction and damage.


产品规格参数

PRODUCT SPECIFICATION:


车长Length:	713MM
车宽Width:	352MM
车高Height :	270MM
轮胎Tire Diameter/Width:	135/54MM
轴距Wheelbase:	425MM
车重 Product Weight:	6.3KG
电调ESC:	150A
马达Motor:	4274
电池仓尺寸Battery Box Size:	181*47.5MM
驱动方式Drivetrain:	全时四驱/4WD
车身结构Suspension:	前独立悬挂后直桥 independent front suspension with a solid-axle

	齿轮比: Gear ratio
马达齿11T Pinion Gear11T:	1:14.55
马达齿12T Pinion Gear12T:	1:13.34
马达齿13T Pinion Gear13T:	1:12.31

遥控器和电调功能介绍 TRANSMITTER and ESC FUNCTIONS

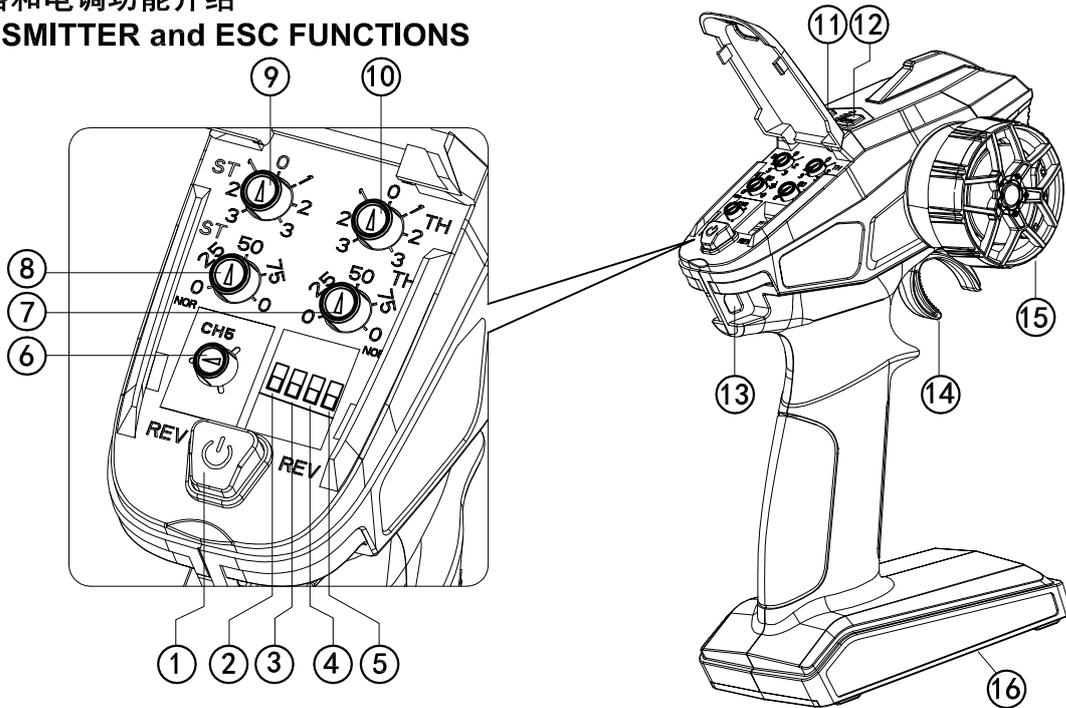


- | | |
|---|---|
| 1) 电源开关
Power Button | 9) 转向中位微调
ST Trim |
| 2) 1通正反切换开关
CH1 Reverse Switch | 10) 油门中位微调
TH Trim |
| 3) 2通正反切换开关
CH2 Reverse Switch | 11) 第3通道
Channel 3 |
| 4) 3通正反切换开关
CH3 Reverse Switch | 12) 第4通道
Channel 4 |
| 5) 4通正反切换开关
CH4 Reverse Switch | 13) 挂绳孔
Lanyard hole |
| 6) 第5通道 (陀螺仪感度调节)
Channel 5 (Gyro sensitivity
adjustment) | 14) 油门/刹车扳手 (2通)
Throttle/Brake Trigger(CH2) |
| 7) 油门舵量旋钮
EPA for Throttle | 15) 转向轮 (1通)
Steering Wheel (CH1) |
| 8) 转向舵量旋钮
EPA for Steering | 16) 电池仓
Battery Installation |

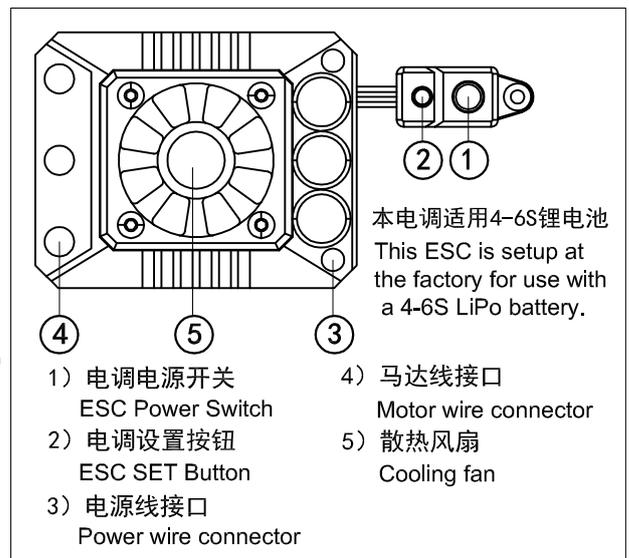



- | | |
|----------------------------------|----------------------------------|
| 1) 电调电源开关
ESC Power Switch | 4) 马达线接口
Motor wire connector |
| 2) 电调设置按钮
ESC SET Button | 5) 散热风扇
Cooling fan |
| 3) 电源线接口
Power wire connector | |

遥控器电池安装 INSTALLING THE TRANSMITTER BATTERIES

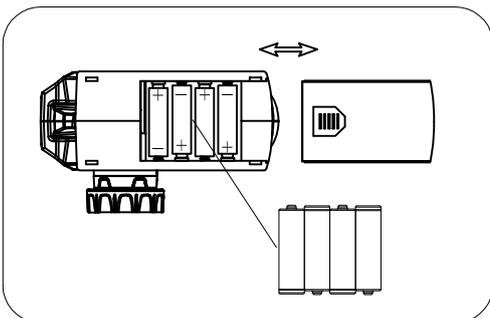


- 按箭头方向滑动，拆下或者安装发射机电池盖。
Remove the battery cover from the transmitter (Slide cover as shown arrow direction)
- 装4颗电量充足的AA电池，注意电池尺寸正负极如图所示，不要装反。
Install 4 AA batteries with sufficient power as shown. Taking care to align the battery polarity.
- 不要混用新旧或不同类型的电池。更换电池型号不正确，或给非充电电池充电有爆炸危险。
Never use different batteries or mixed old and new batteries. Risk of explosion if battery is replaced by an incorrect type or charging non-rechargeable batteries.
- 定期检查遥控器上电池电量。电池电量不足情况下，不能操作车子，信号会受到影响，车子可能瞬间失控，导致发生碰撞或伤害。长时间不使用时，请将电池从遥控器内取出。
Check the transmitter battery level regularly. Never operate your model with low transmitter batteries, the radio signal may be subject to interference and cause momentary loss of control and collisions or injury. When not in use for a long time, please remove the battery from the transmitter.

操作模型车 DRIVING PRECAUTIONS

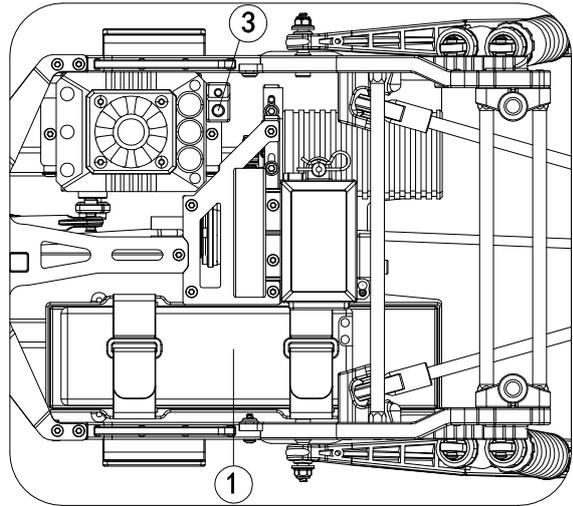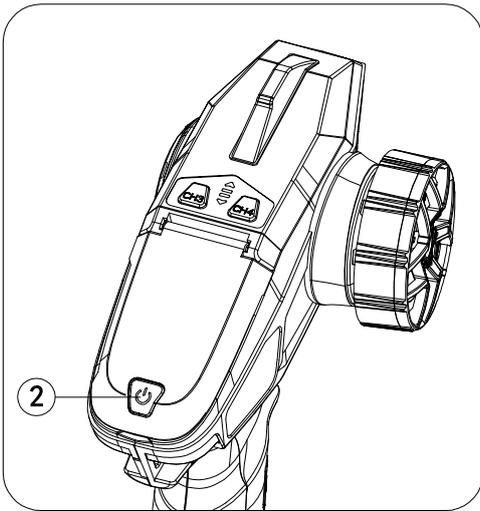


- 1) 将充满电的电池放入电池盒, 连接好电池与电调线插头, 注意孔位正确。
Install a fully charged battery pack into the vehicle battery box. Connect the battery power lead to the ESC wires plug, noting proper polarity.
- 2) 打开遥控器电源开关, 遥控器电源指示灯点亮。
Power ON the transmitter, the battery Indicator lights.
- 3) 打开电调电源开关, 电调指示灯点亮, 控制系统进入工作状态。
Turn on ESC Power Switch, the LED Lights, indicating control system enters working status .

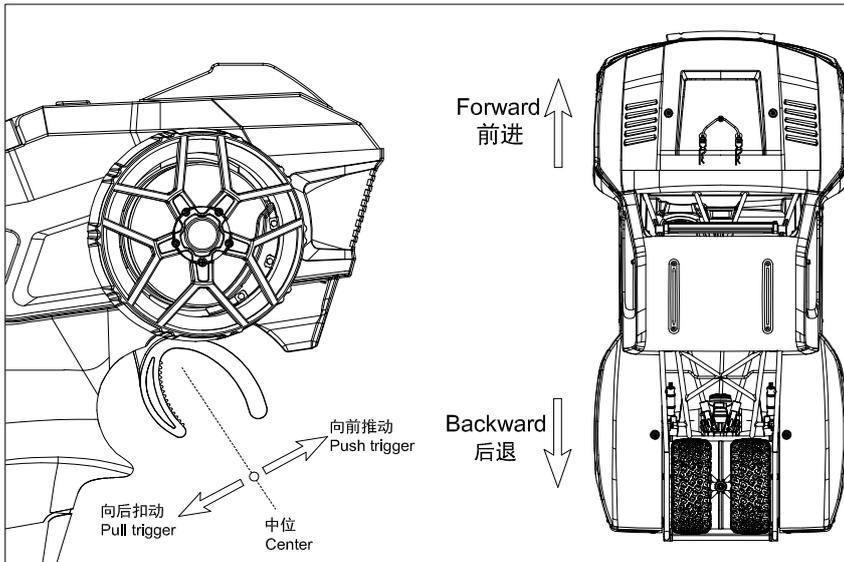


用手指向后扣动遥控器扳机, 车将向前行驶。
用手指向前推动扳机一次为刹车, 松开手指待扳机回到中位后再向前推动则为倒车。

To move the vehicle forward, pull the Throttle trigger .
To reverse the vehicle, push the transmitter trigger one time is brake, pause, then return the trigger to center. Push again is Reverse.

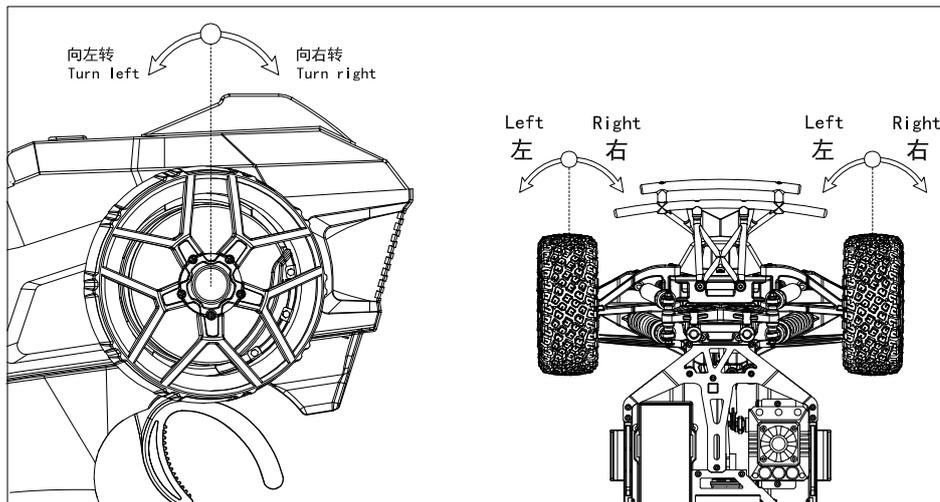


车前轮的运动是随遥控器转向轮的调整而改变的。
遥控器转向轮向左转, 车前轮也是左转。
遥控器转向轮向右转, 车前轮也是右转。

The front wheel movement is controlled by transmitter steering wheel.
Turn transmitter steering wheel left, the vehicle front wheel turns left.
Turn transmitter steering wheel right, the vehicle front wheel turns right.

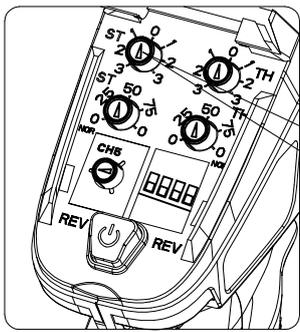


转向中位微调
Steering trim

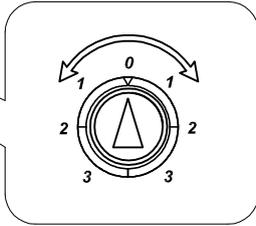


在没有操控转向轮的情况下，车辆前轮应该处于中心位置。如果前轮偏向左侧，请顺时针转动转向微调旋钮进行微调。如果前轮偏向右侧，请逆时针转动转向微调旋钮进行微调。

Without turning transmitter steering, the vehicle front wheels should maintain a straight line. If not, adjust ST Trim knob until the vehicle tracks straight. If the front wheel is tilted to the left, fine tuning ST Trim knob clockwise. If the front wheel is tilted to the right, fine tuning ST Trim knob counterclockwise.

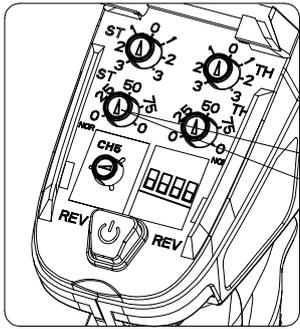


转向角度舵量调整旋钮
Steering End Point Adjustment

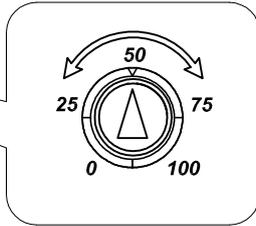


调整转向角度舵量大小，来适应不同弯角路面的行使需要。顺时针转动该微调旋钮，可以将转向角度调整到最大。逆时针转动该微调旋钮，可以将转向角度调整到最小。

Adjust Steering End Point to help adapt to different terrains. Clockwise twist this knob: adjust to the maximum steering angles. Counterclockwise twist this knob: adjust to the minimum steering angles.

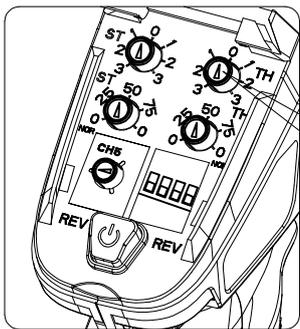


油门中位微调
Throttle Trim

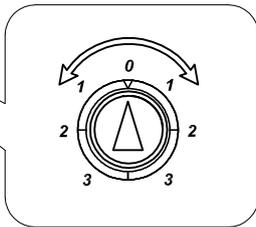


在没有操控油门扳机的情况下，车辆应该处于静止状态。如果车子自行前进，请逆时针转动油门中位微调旋钮进行微调。如果车子自行后退，请顺时针转动油门中位微调旋钮进行微调。

Without operating throttle trigger, the vehicle should be motionless. If vehicle moves forward, counterclockwise adjust Throttle Trim knob. If vehicle moves backward, clockwise adjust Throttle Trim knob.

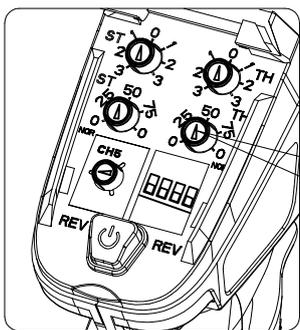


油门限速旋钮
Throttle Limit

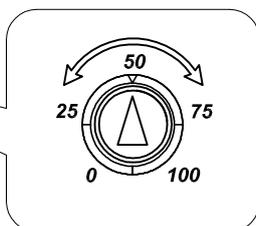


设定遥控油门限速旋钮控制量大小，逆时针旋转是降低控制量（最低可以降到0%），顺时针旋转是加大控制量（最高值为100%正常油门控制量）。

对于初学者而言，可以先尝试调低油门控制量来适应车辆。

Set Throttle Limit knob to limits throttle output. Counterclockwise Throttle Limit knob to reduce the limit output(minimum 0%) Clockwise adjust Throttle Limit knob to increase the limit output(maximum 100% is for normal) Suggest the less experienced select Throttle Limit to reduce speed.

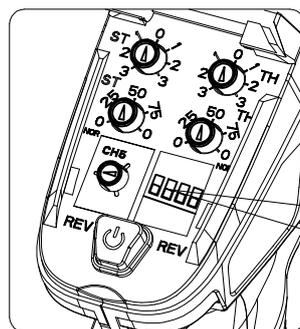

正反切换开关
Reverse switch

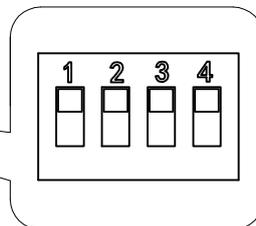

如果遥控的操作与车辆动作不一致，请调整此正反切换开关，直至遥控操作和车辆动作一致。

If the operation on transmitter is inconsistent with the vehicle actual performs (forward/backward, left/right) , please adjust this switch to correct.

常见问题及故障处理 Troubleshooting

	故障现象 Problems	故障分析 Causes	故障排除 Solutions
遥控器 Transmitter	电源指示灯不亮 LED does not work.	电池没电或电池安装错误 Weak batteries or batteries are not installed properly.	更换新的电池或检查正负极 Replace with new batteries or install them correctly.
	电源指示灯频率式慢闪 LED flashes slowly.	电池电量不足 Low battery power.	更换新的电池 Replace with new batteries.
	指示灯正常亮起,但是无功能,无法操控车辆 Switch on, normal LED indicate, but no function and cannot operate vehicle.	周围可能有其它正在运行的电子产品导致的遥控频率干扰 Signal interference with other transmitters around you.	重启模型车和遥控器或更换场地 Switch off firstly, and then switch on again or change to other places.
模型车 Car	接通电源后指示灯不亮 Connected, but fail to be switched on.	电池没电或电池过放而损坏,或电路接线破损 The battery pack is flat or damaged. The connectors and wires may break.	更换为已充电的电池,检查电池或线路是否损坏 Charge the battery pack and replace with the new battery pack when needed, check all wires and connectors.
	转向异常或失灵 Connected, but fail to be switched on.	检查是否有杂物阻塞转向结构,或转向部件或舵机已损坏 Steering device is jammed or steering servo is damaged.	检查所有部件,更换损坏的或磨损的部件 Check all the steering parts and or steering servo. Fix or replace with new parts if needed.
	能转向,但无法前进或后退 Steering functions, but the car is not able to go forwards or backwards.	电池电力不足, The battery pack is flat. 传动部件损坏或被杂物阻塞. Damaged or clogged parts in drive train. 电调功能异常 ESC malfunctions.	更换为已充电电池, Charge the battery pack. 清理与更换部件. Clean, fix and replace with new parts. 更换电调 Replace with new ESC.
	模型车行驶时噪音大 The car drives noisily.	检查是否有杂物阻塞传动部件,或传动部件损坏或脱落,检查齿轮齿合度,检查并分析差速器齿轮是否已出现扫齿、崩牙等现象。 Check if the drive train is tight or blocked or damaged driving parts. Check the gear mesh and check if the diff. is damaged or not.	及时更换已损坏的齿轮、传动轴、传动接杯或差速器 Replace with new gears, diff. driveshafts, outdrive cups in the event that they are damaged. Do not use the car until it has been repaired


维修服务

REPAIR SERVICE:

- 1) 车辆需要经常保养,以保持其性能,特别是活动的零件部位,每次跑车完及时清除上面的尘土杂物。保持车辆清洁和良好的保养。
Periodic maintenance in order to ensure the vehicle best performance, especially the running parts. Remove chassis free of dirt and debris after every driving. Keep your vehicle clean and well maintained.
- 2) 定期检查车上有螺丝的地方,有必要就拧紧加固。
Regularly check the screws on the car and tighten them if necessary.
- 3) 经常检查车上面磨损/弯曲/坏掉的部件,有必要就换掉。
Always check for wear/broken/bent parts, and replace it if necessary.
- 4) 所有的零件都可以作为散件在爆炸图上找到编号,有损坏可以在零售商订购更换。有任何问题,都可以在零售商寻求帮助。
All parts listed on the exploded view. Damages can be ordered at the retailer. If you have any questions, you can ask for help at the retailer.


Front Differential Gear Assembly

前差速器组装

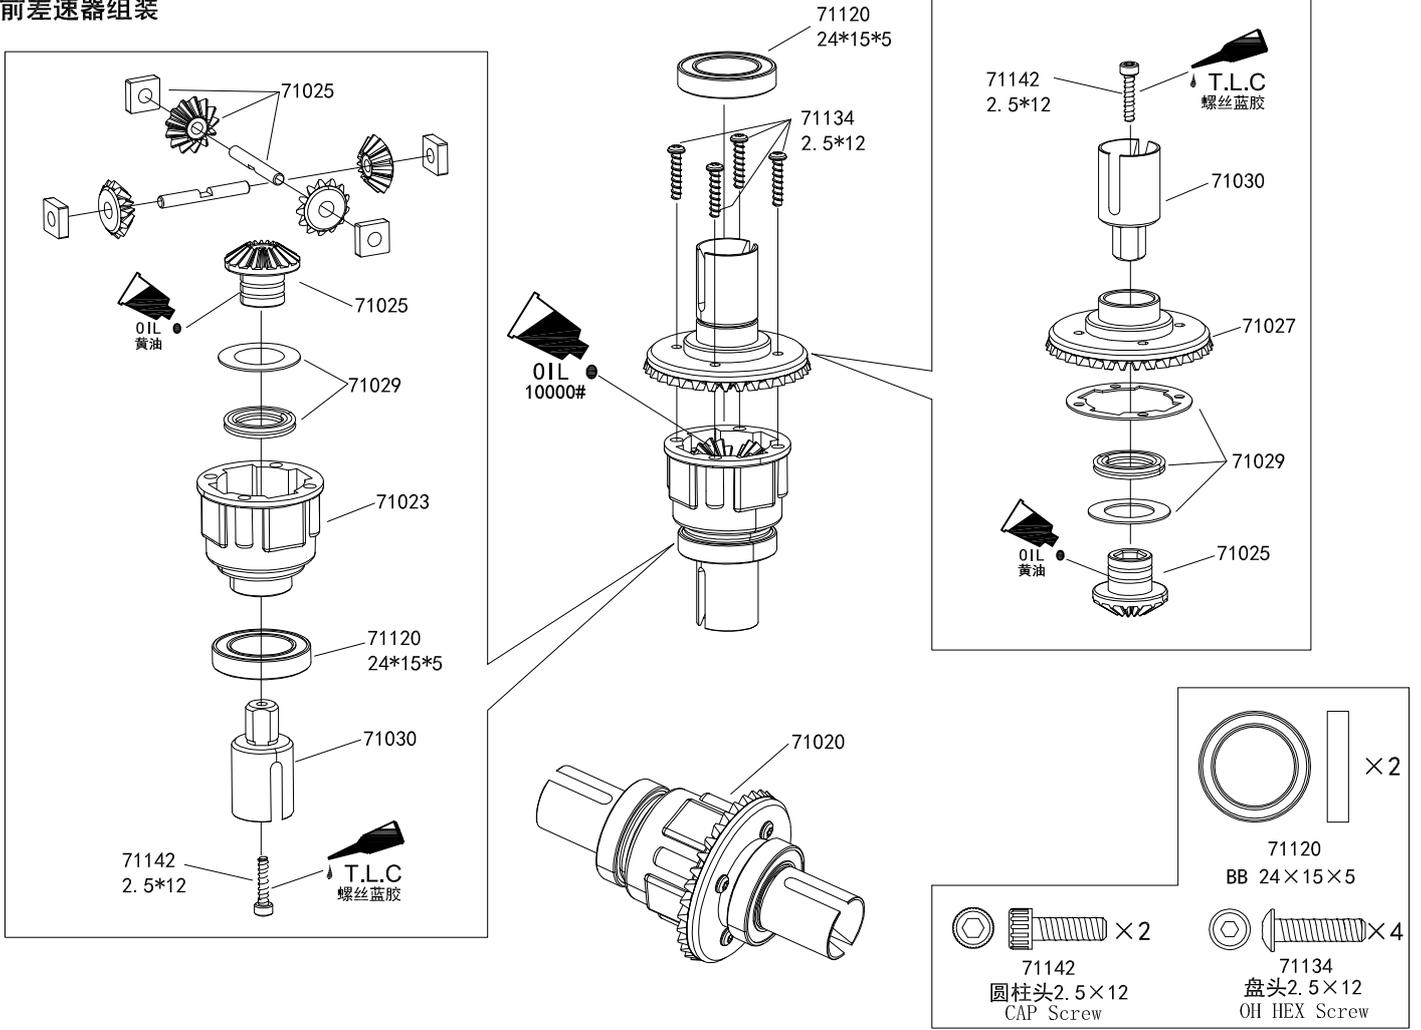


Center Differential Gear Assembly

中差速器组装

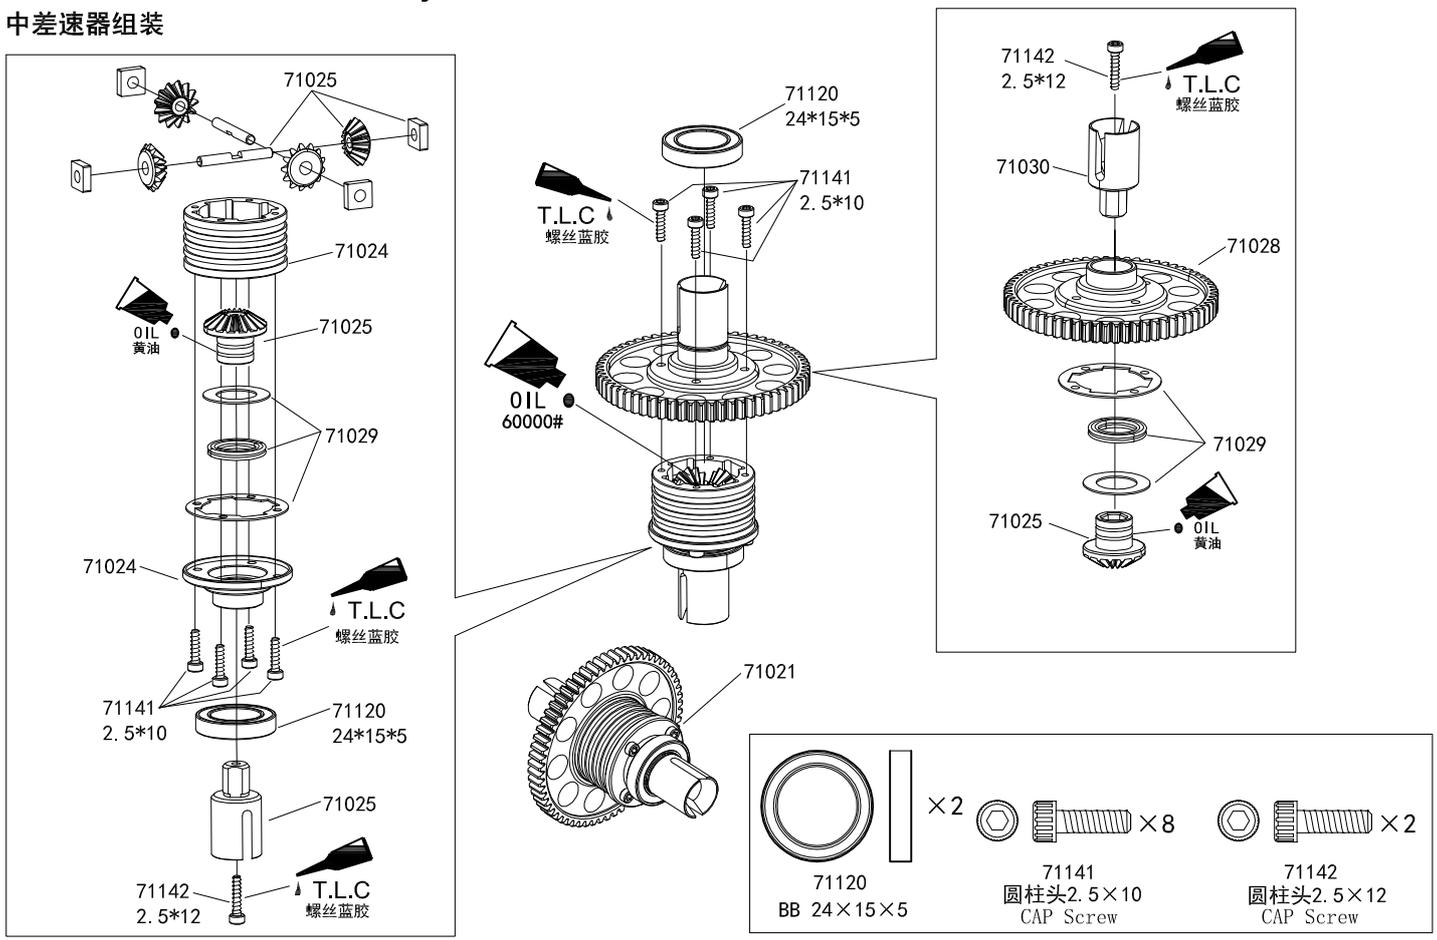


Rear Gear Reduction Assembly

后减速器组装

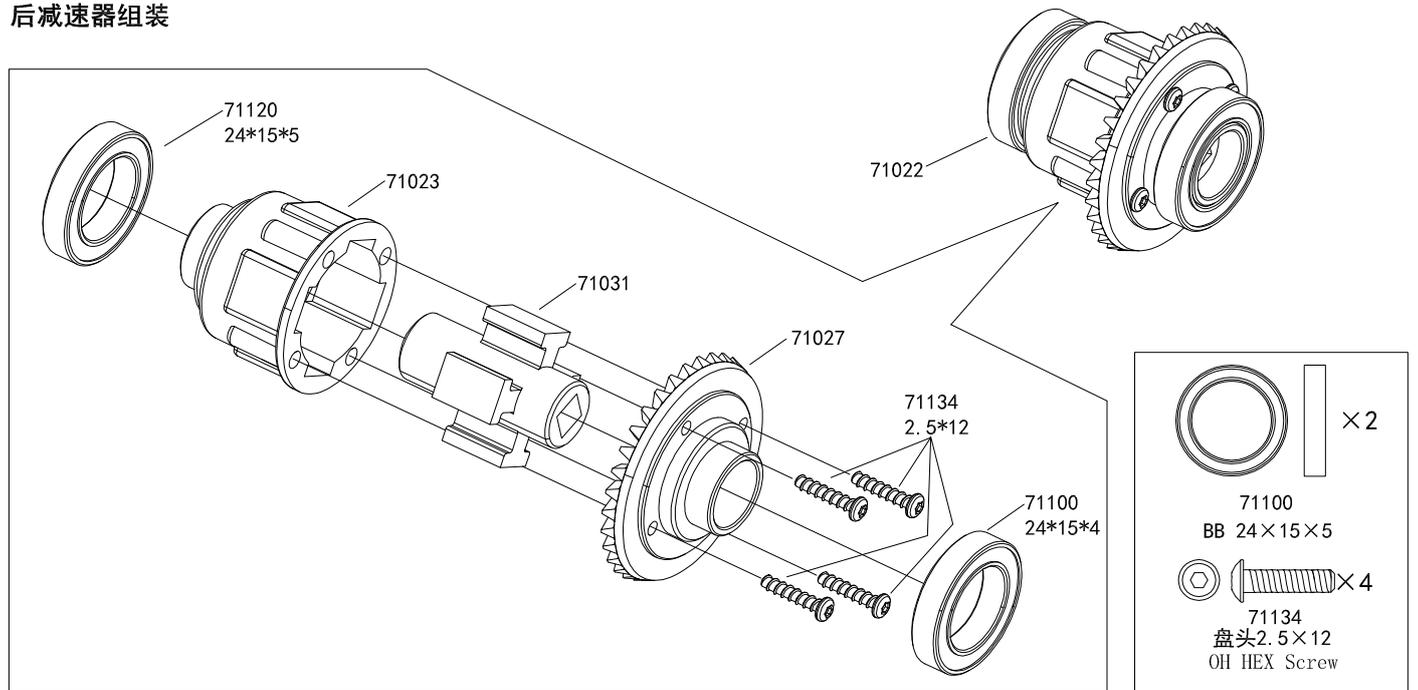



Steering Servo Saver Assembly

转向缓冲组装

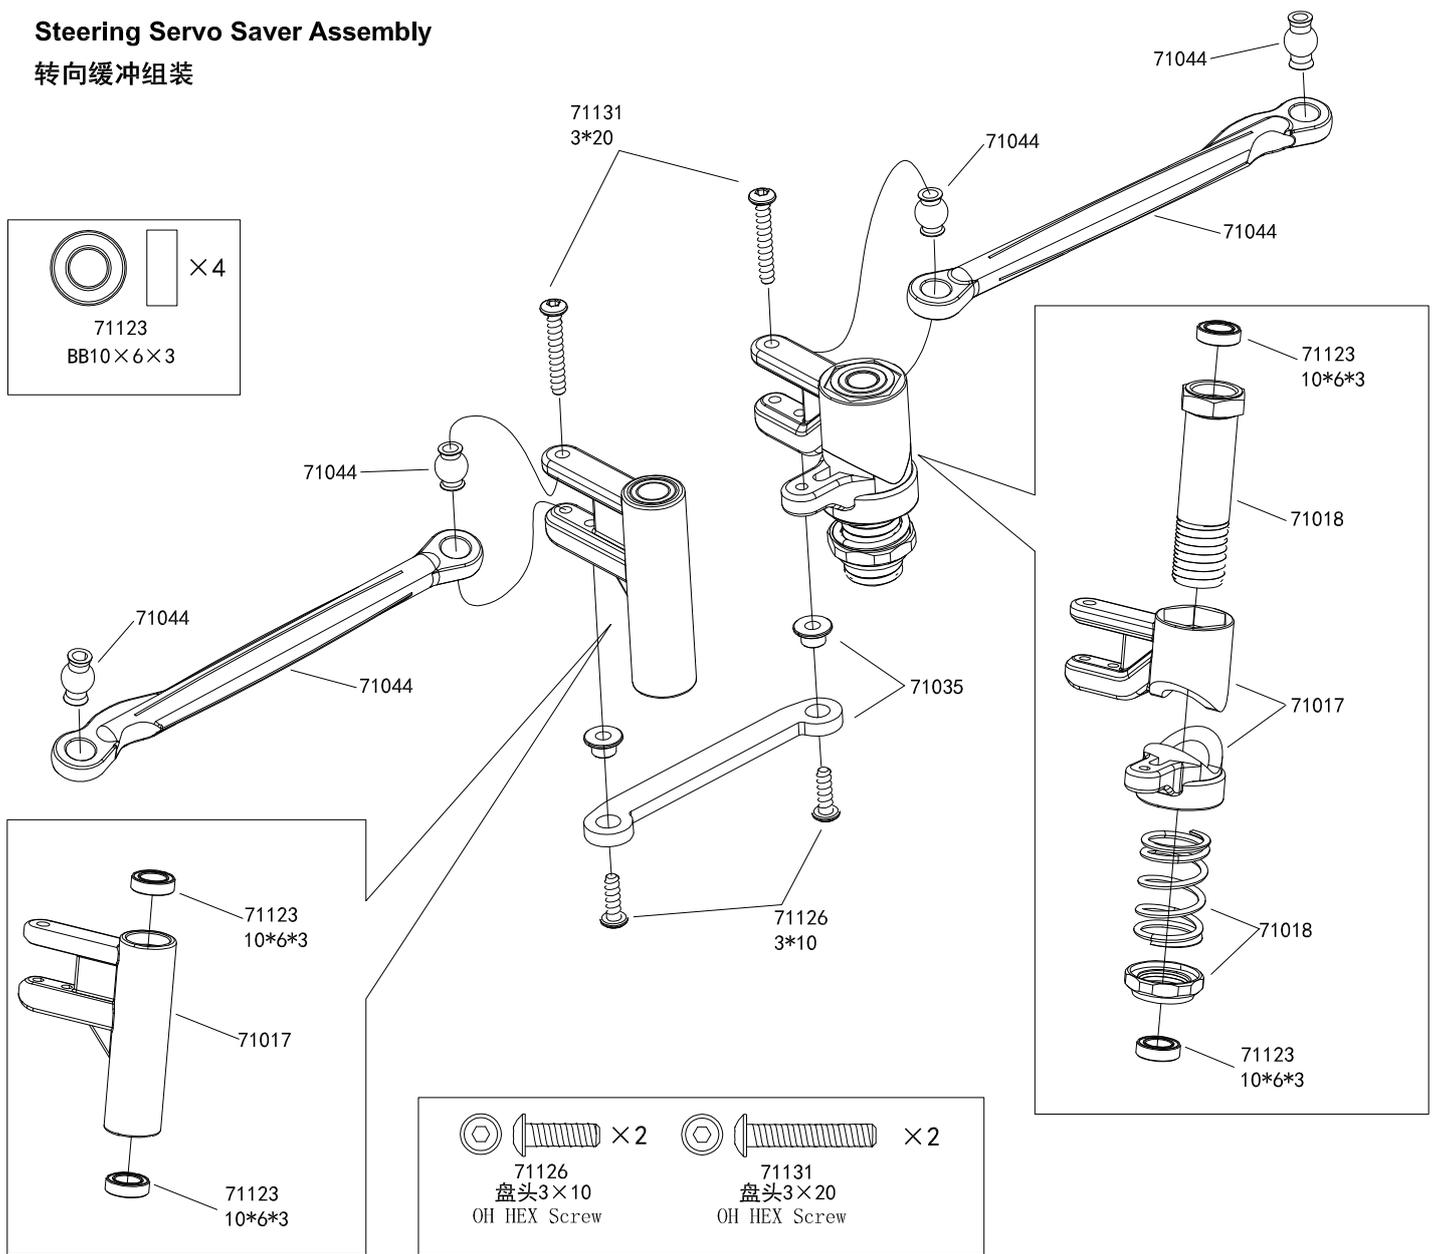

Steering Servo Assembly



转向舵机组装

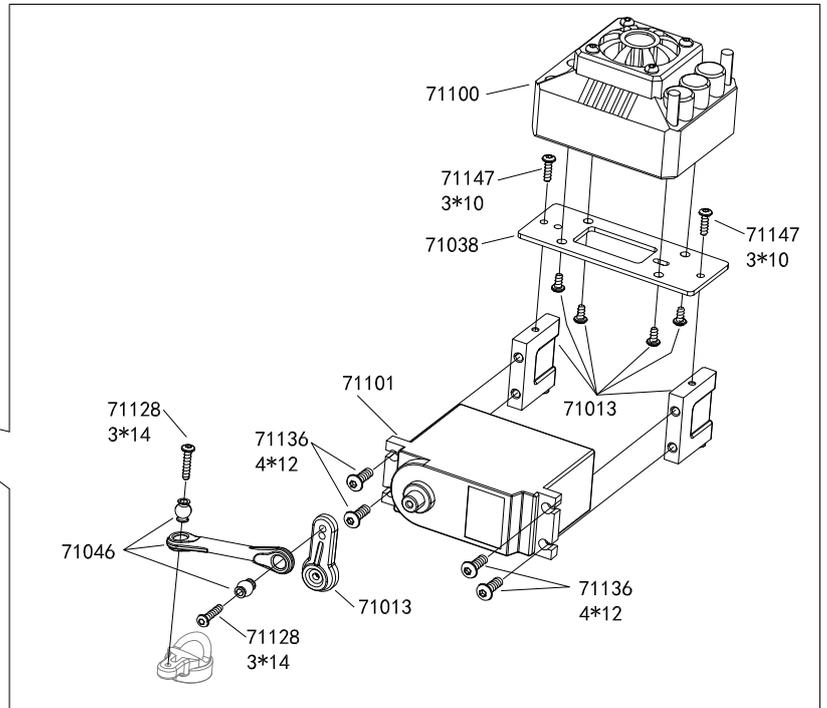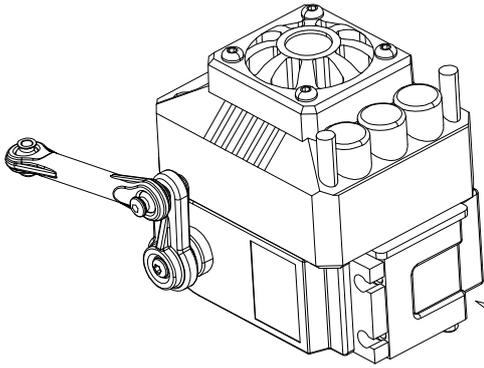

	×4		×2
71124	盘头3×6	71147	平头3×10
OH HEX Screw		FH HEX Screw	
	×2		×4
71128	盘头3×14	71136	盘头4×12
OH HEX Screw		OH HEX Screw	

Center Differential Assembly


中差组装

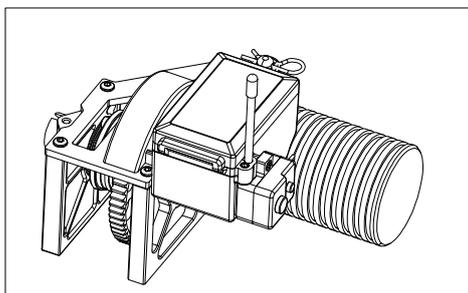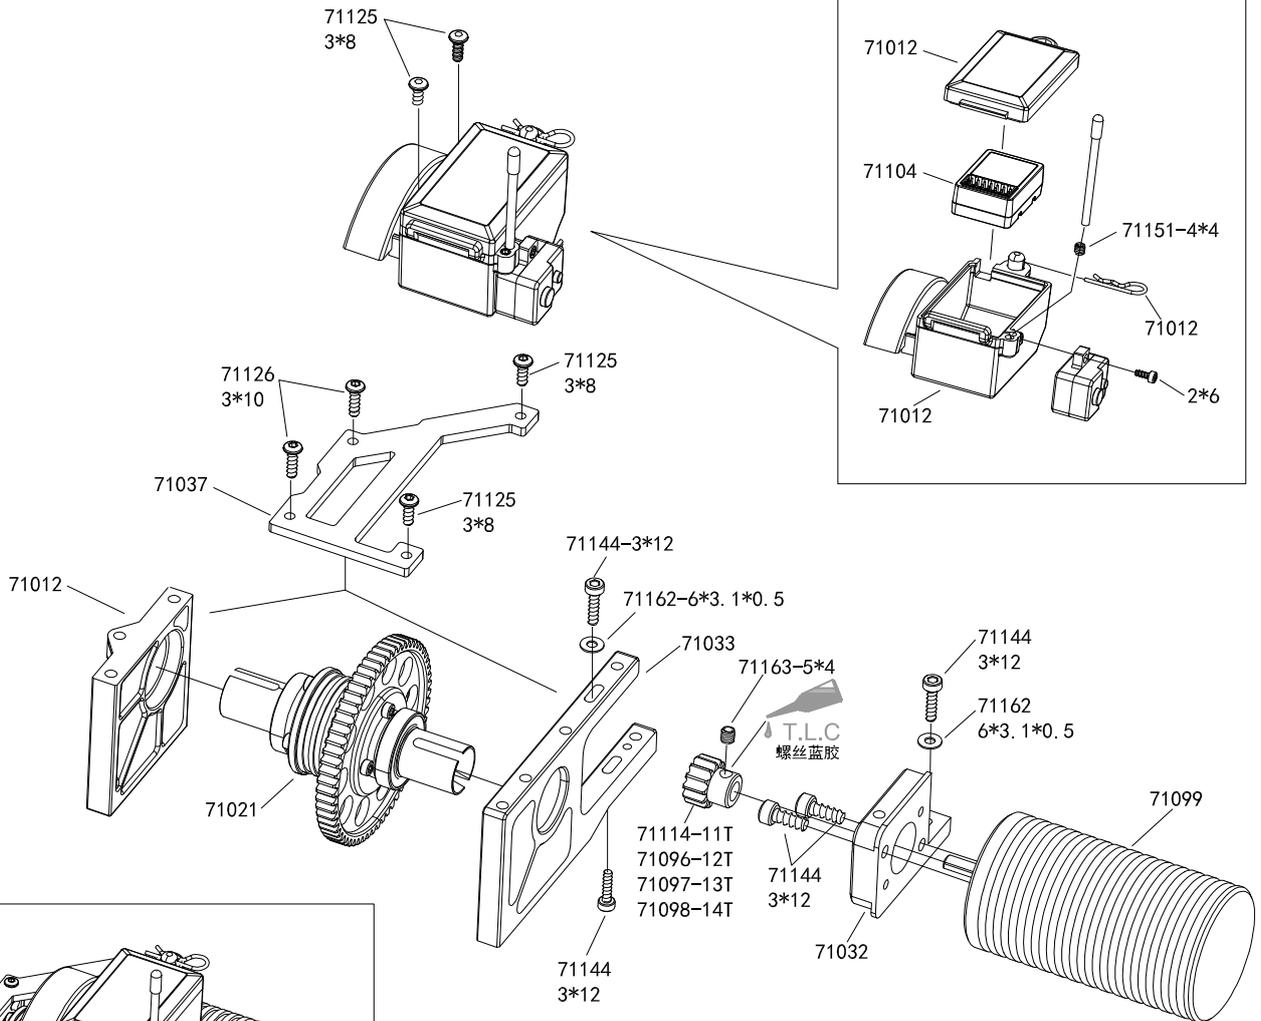

	×2		×5		×5		×2
71162	垫片7×5.1×0.5	71144	杯头3×12	71125	盘头3×8	71126	盘头3×10
Shim		CAP Screw		OH HEX Screw		OH HEX Screw	


Shock Front/Rear Assembly

避震器前/后组装

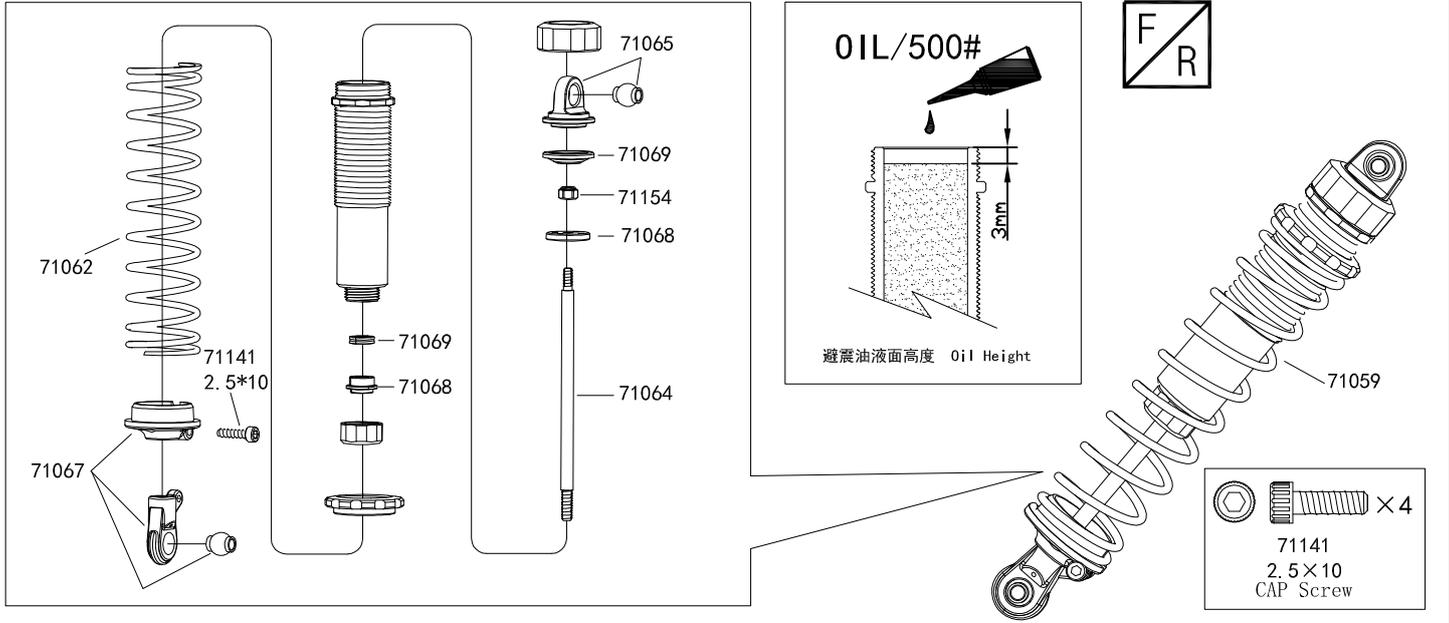


Front Shock Assembly

避震器前组装



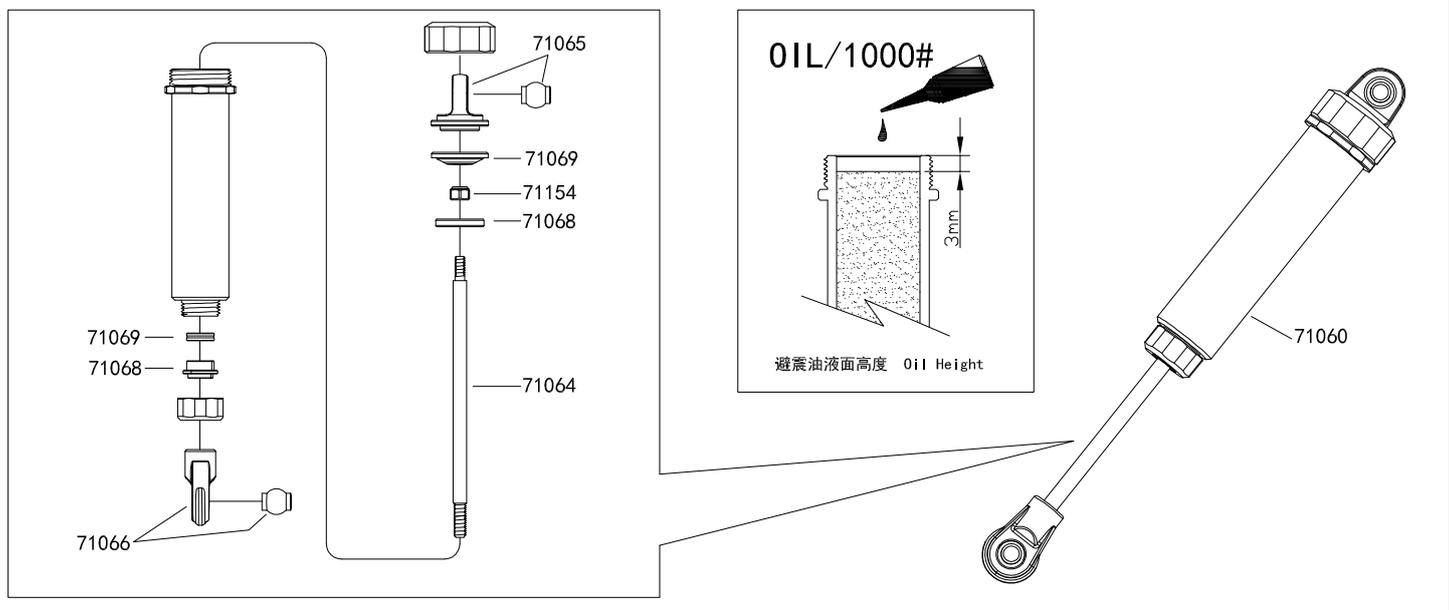


Rear Shock Assembly



避震器后组装

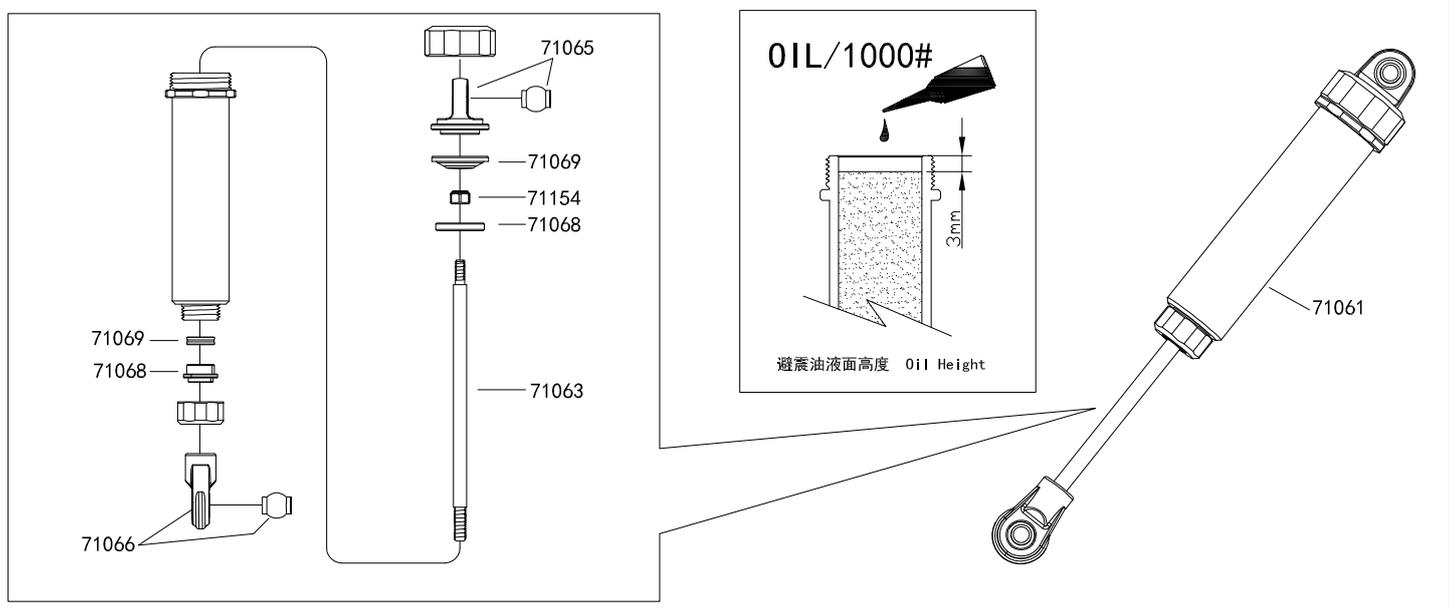

Front Gearbox Assembly 前齿轮箱组装

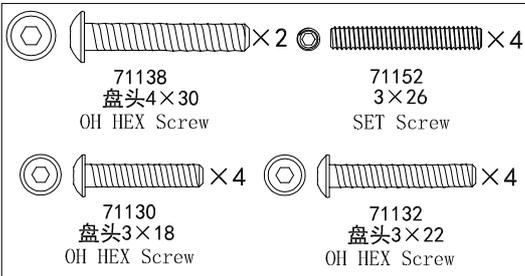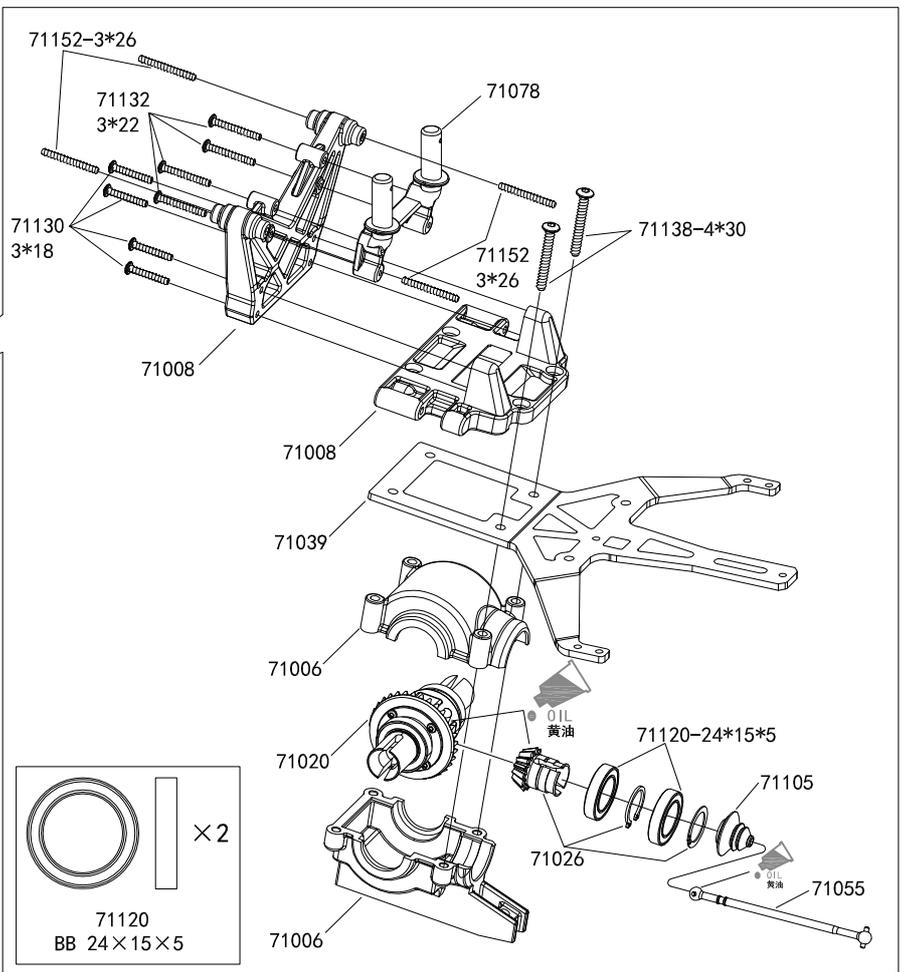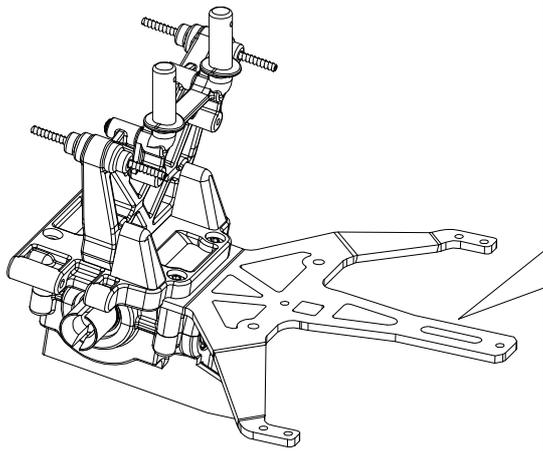


Front Suspension Arm Assembly 前摆臂组装

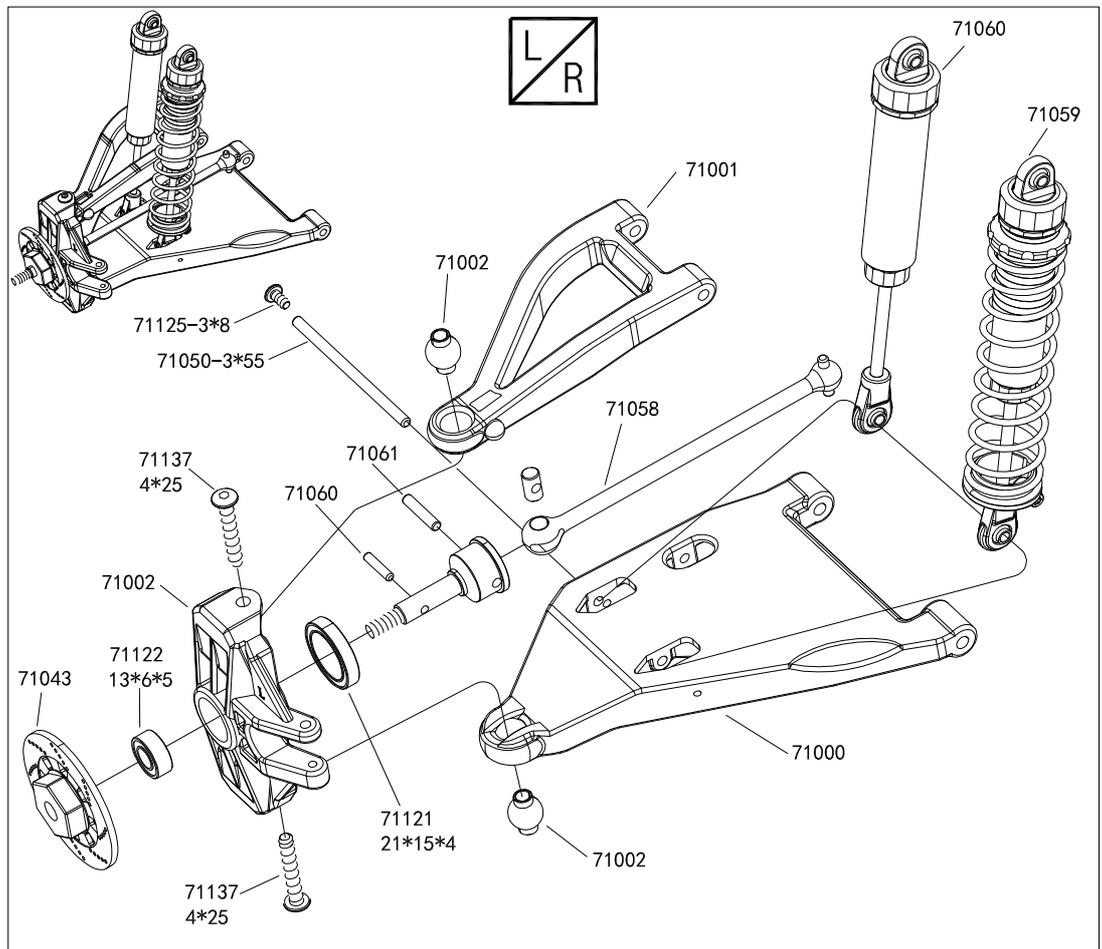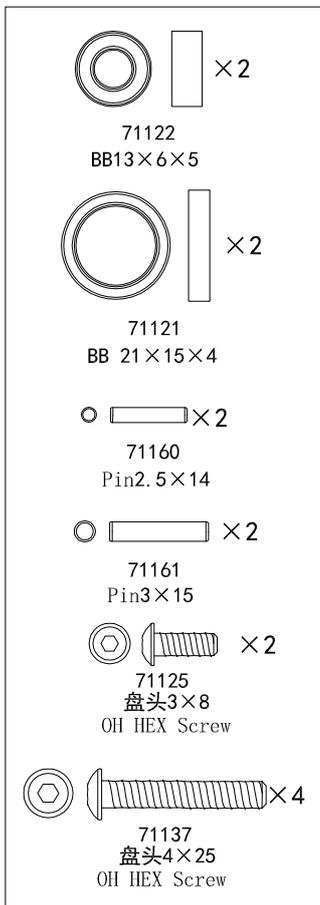


Front Assembly

前段组装

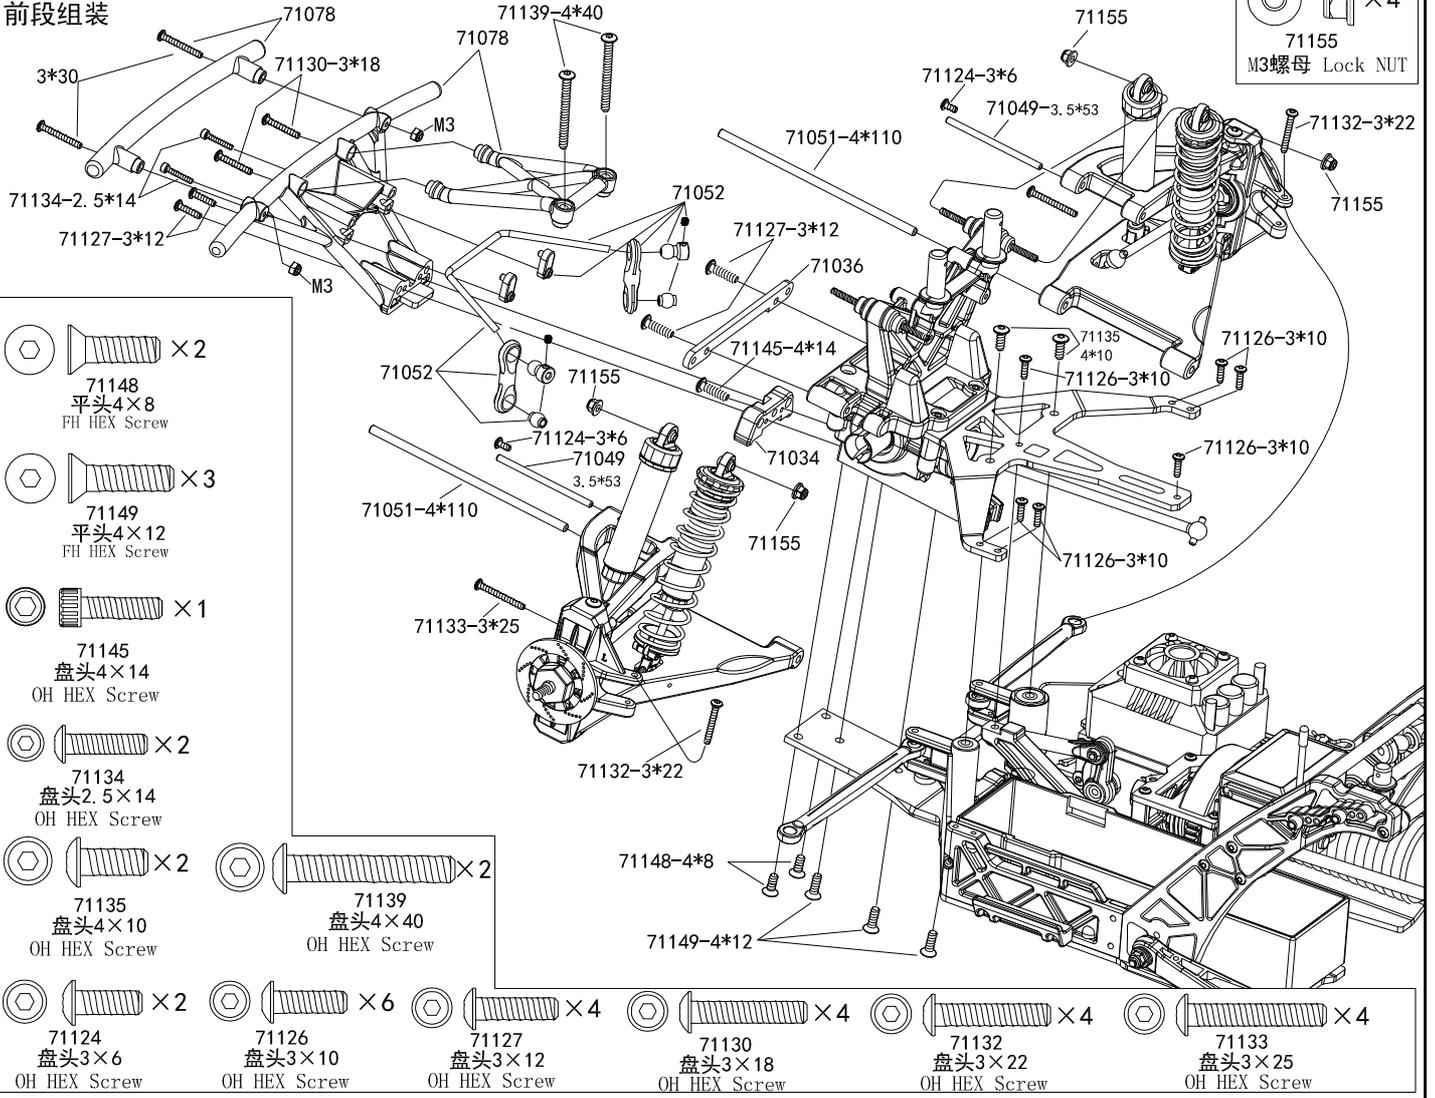


Rear Shock Assembly


后避震器组装

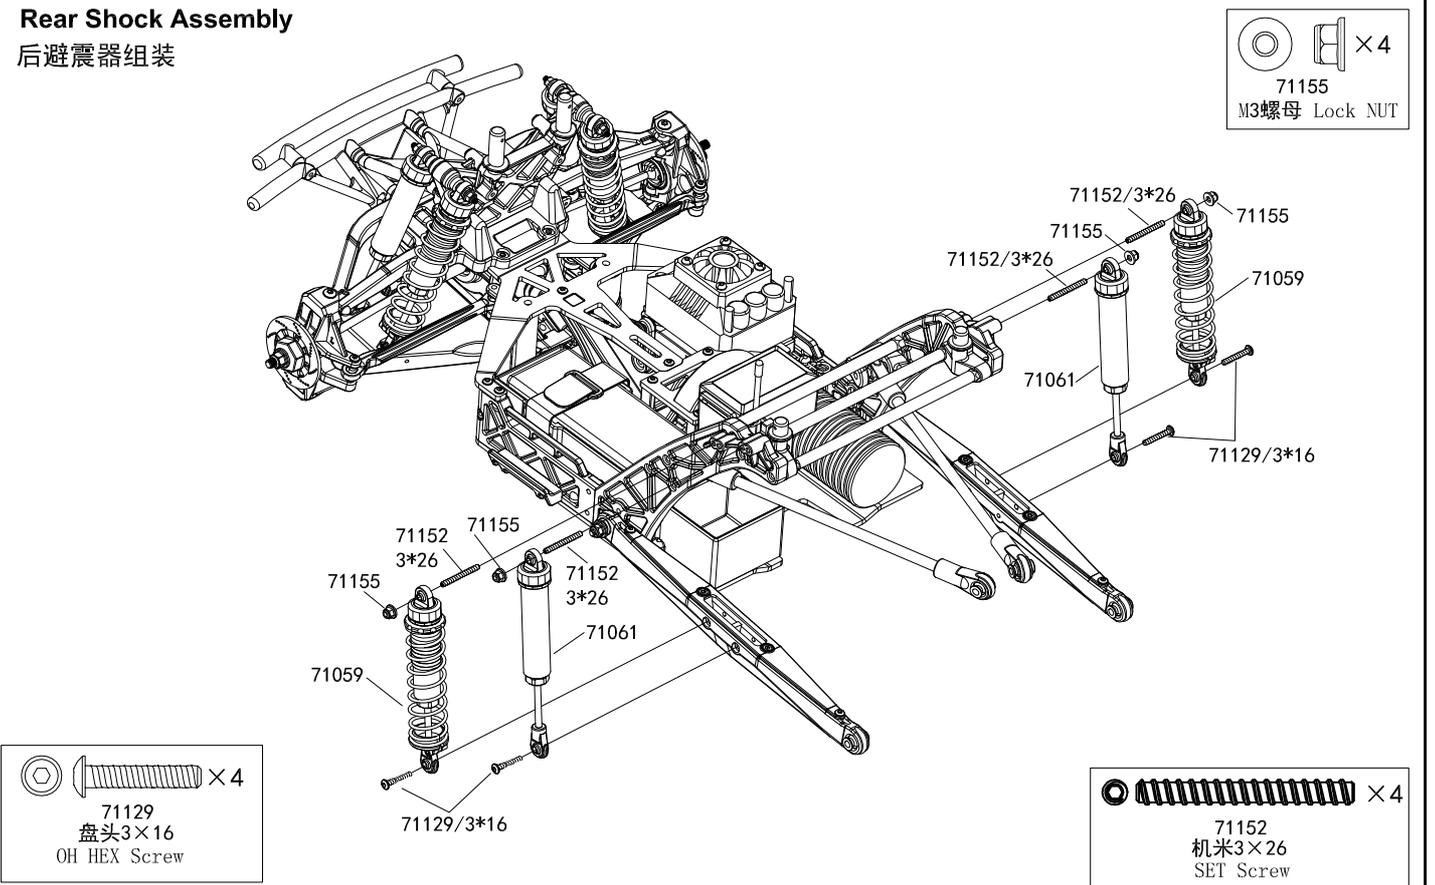

Spare Tire Assembly
备胎架组装


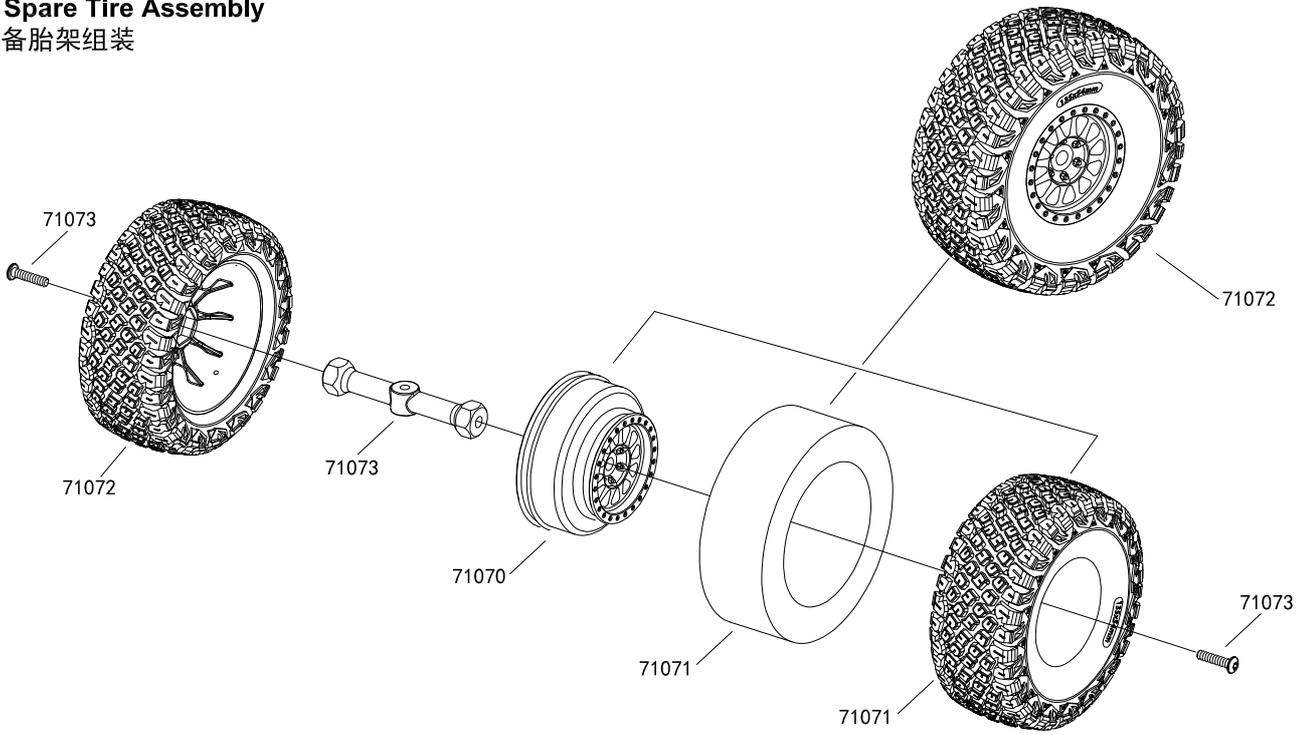


Roll Cage Assembly
车棚架组装

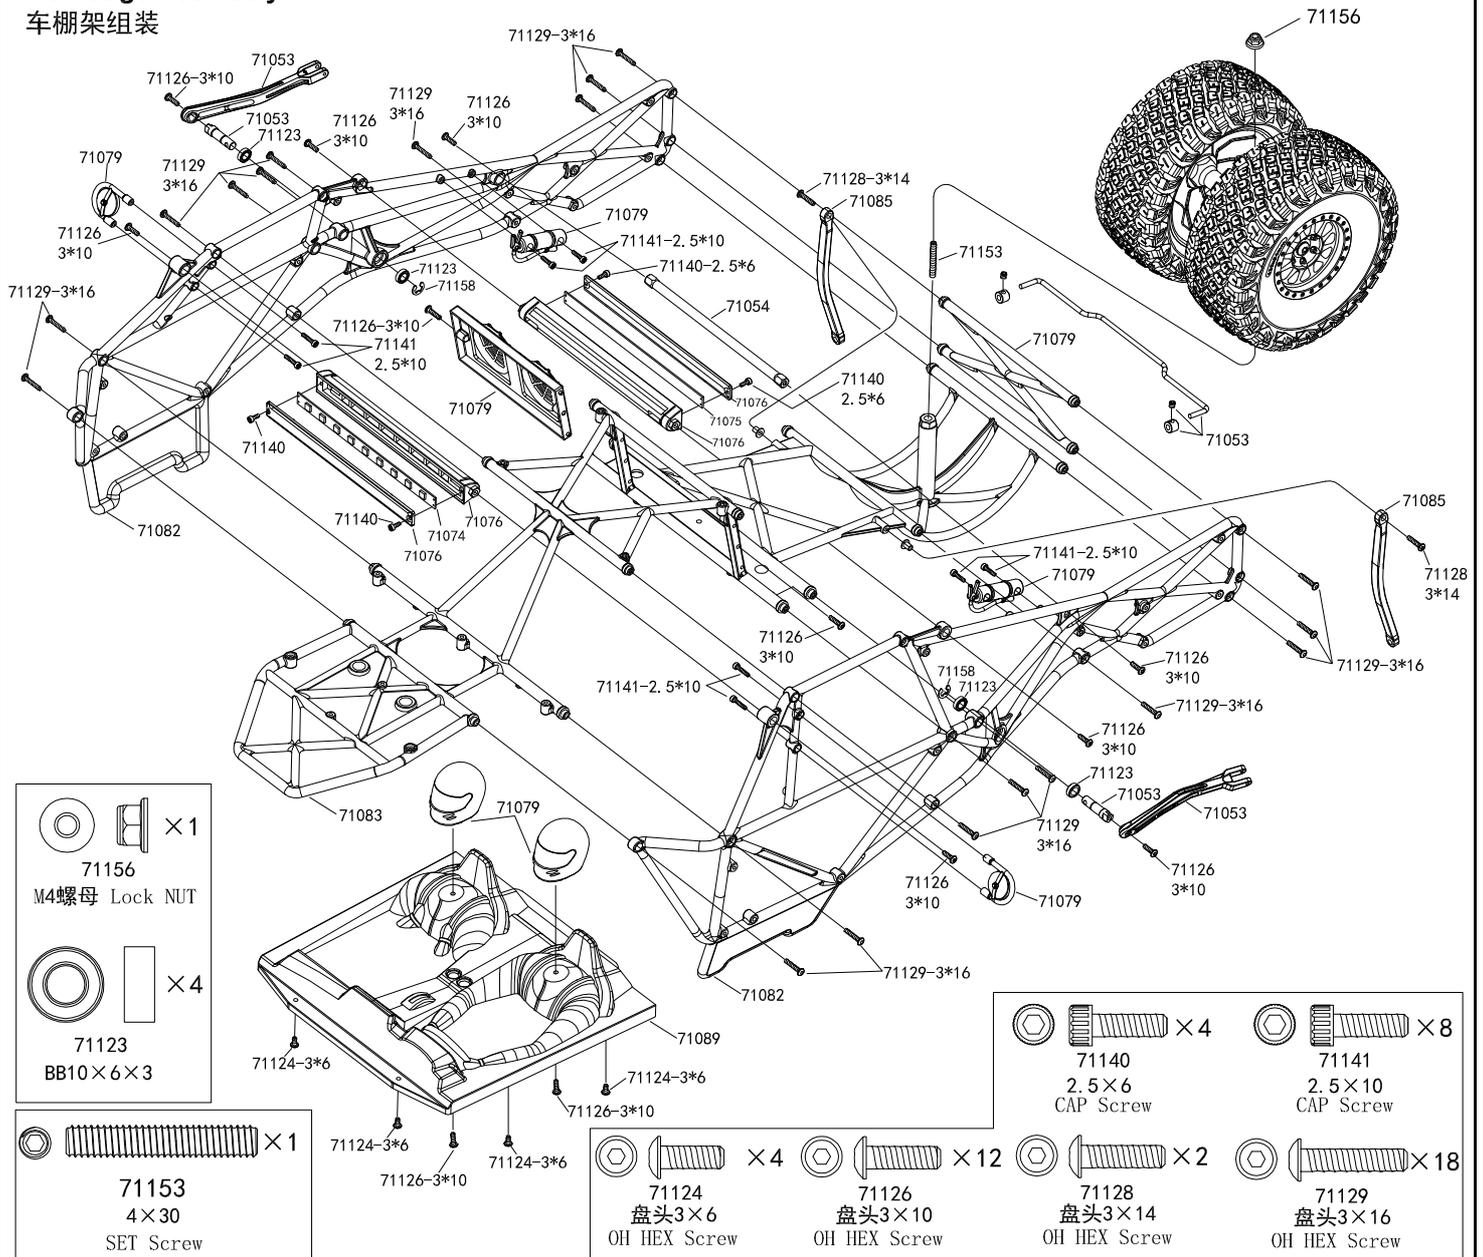

Wheels and Tires Assembly

轮胎安装

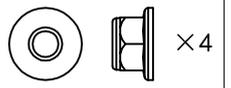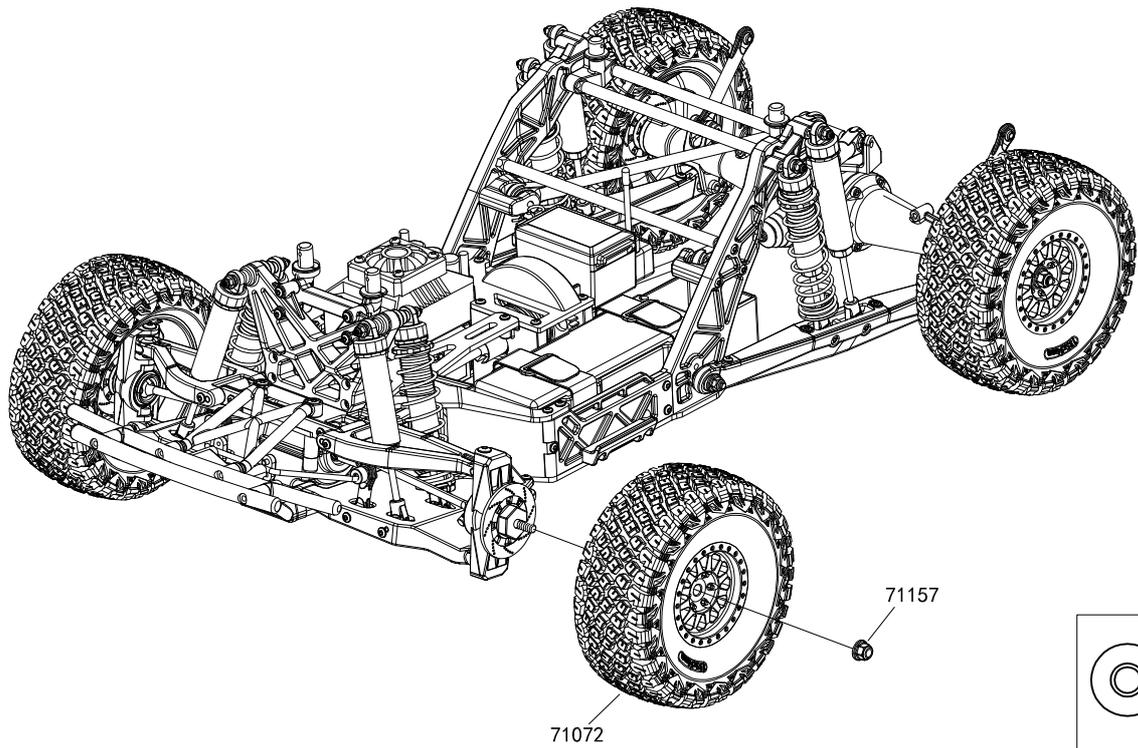


71157

M5螺母 Lock NUT

Body Assembly

整车组装

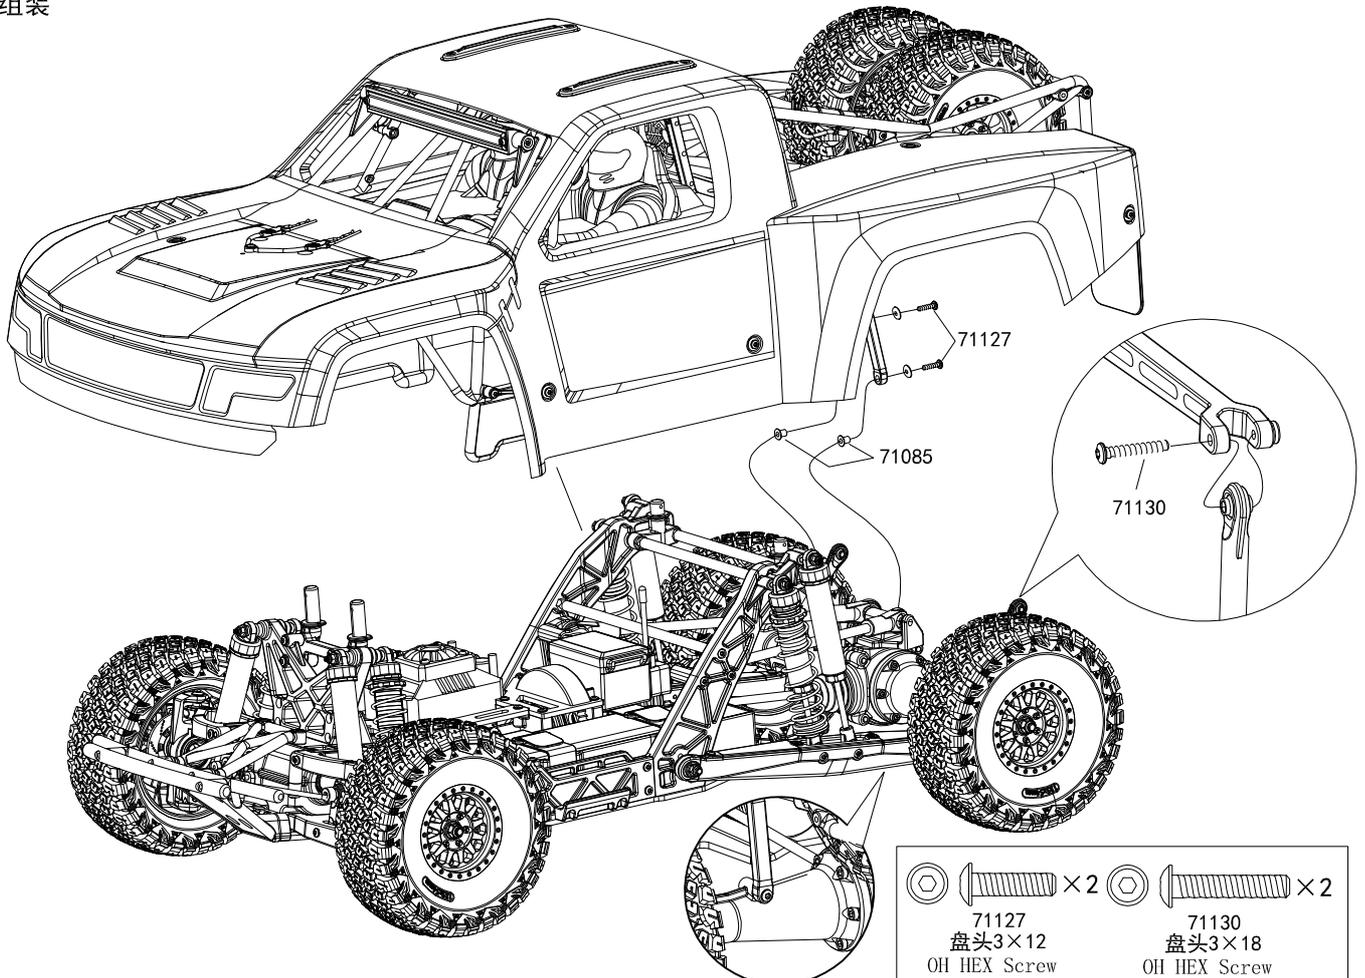

71127


盘头3×12
OH HEX Screw

71130

盘头3×18
OH HEX Screw


配件表 Parts List

71000

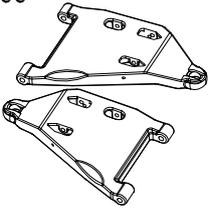


前下摆臂
Front Lower Suspension Arm

71001

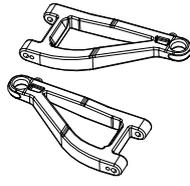


前上摆臂
Front Upper Suspension Arm

71002

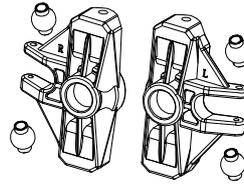


转向座左/右
Spindle Left/Right

71003

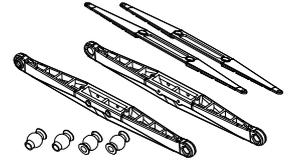


后桥刀臂
Rear Trailing Arm

71004

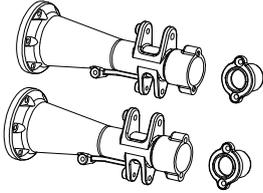


后桥管
Rear Portal Housing

71005

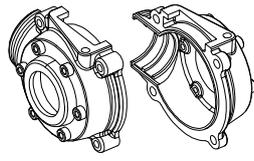


后桥蛋
Rear Portal GearBox

71006

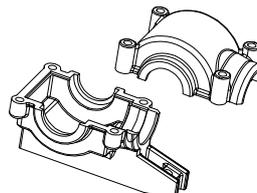


前齿轮箱
Front Gearbox

71007

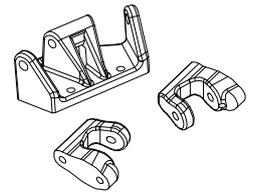


后桥固定座
Rear Camber Block

71008

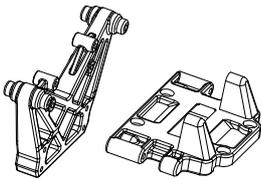


前避震支撑
Front Shock Tower

71009

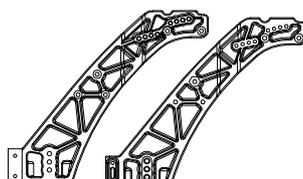


后避震支撑
Rear Shock Tower

71010

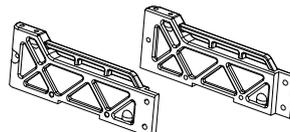


底板侧支撑
Chassis Side Guard

71011

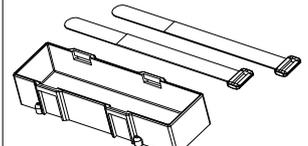


电池盒
Battery Tray

71012

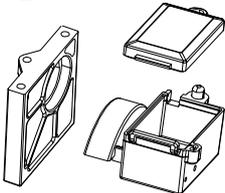


中差座/接收盒
Center Diff Mount/Radio Box

71013

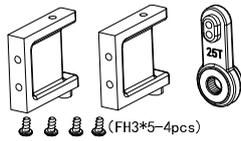


25KG标准尺寸舵机固定座
Servo Mount (for 25kgs)

71014

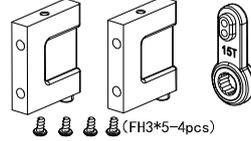


30KG大尺寸舵机固定座
Servo Mount (for 30kgs)

71015

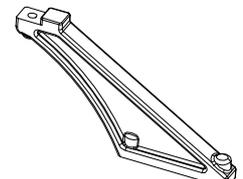


前支撑
Front Brace

71016

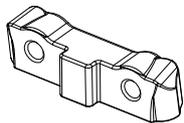


前摆臂码后
FR Suspension Mount

71017

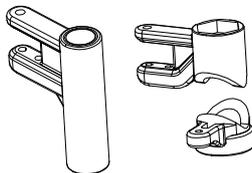


缓冲座
Bell Crank

71018

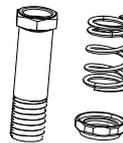


缓冲铝柱
Bellcrank Parts Alum

71019

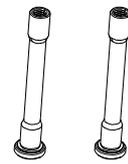


缓冲钢柱
Bellcrank Post Steel

71020

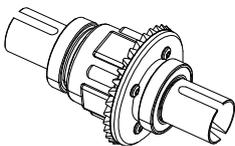


前差速器
Front Gear Diff

71021

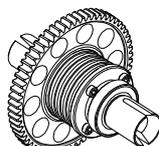


中差速器
Center Gear Diff

71022

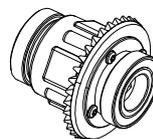

后减速度器
Rear Gear Reduction


71023

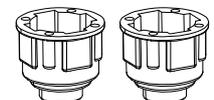

差速壳
Diff Case


配件表 Parts List

71024

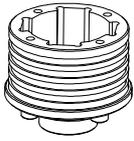


中差速壳 (铝合金)
Aluminum Center Diff Case

71025

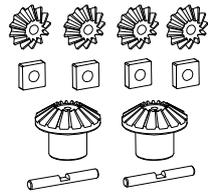


差速大/小齿轮13T/16T
Diff Spyder and Sun Gear 13T/16T

71026

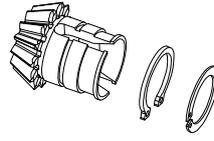


钢制主动齿轮13T
Steel Pinion Gear 13T

71027

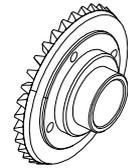


钢制从动齿轮33T
Steel Ring Gear 33T

71028

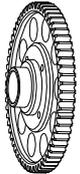


中差大钢齿63T
Steel Spur Gear 63T

71029

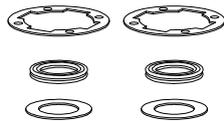


差速密封垫
Differential Gasket

71030

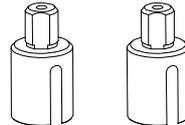


钢制差速接杯
Steel Differential Outdrive

71031

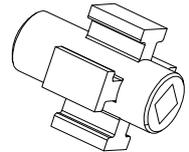


铝合金直轴固定座
Alum Differential Locker

71032

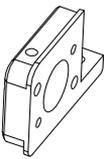


CNC铝合金马达调整座
CNC Alum Motor Adaptor

71033

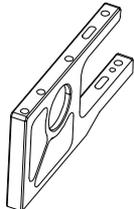


CNC铝合金马达座
CNC Alum Motor Mount

71034

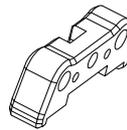


CNC铝合金前摆臂码前
CNC Alum Front Suspension Brace

71035

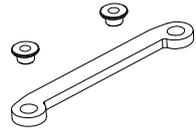


钢制缓冲连片
Steel Steering Drag Link

71036

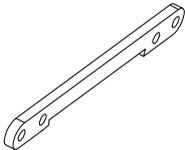


钢制前上摆臂码
Steel Front-Upper Suspension Arm Holder

71037

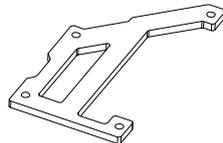


铝合金马达座支撑板
Alum Motor Mount Support Brace

71038

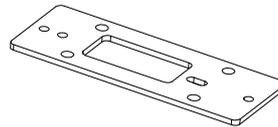


铝合金舵机固定板
Alum Servo Mount Plate

71039

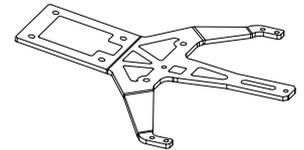


铝合金前上支撑板
Alum Front Upper Strengthening Plate

71040

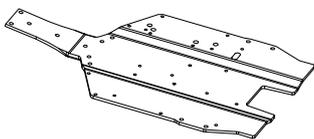


铝合金底板
Alum Chassis

71041

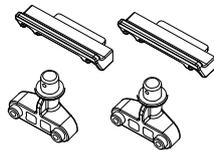


车棚固定座
Cage Support Mount

71042

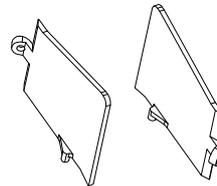


前挡泥板
Front Mud Flap

71043

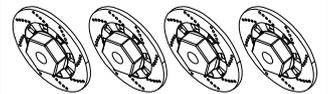


六角轮座
Wheel Hex

71044

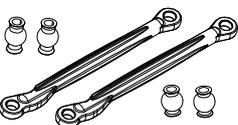

转向拉杆
Steering Link

71045

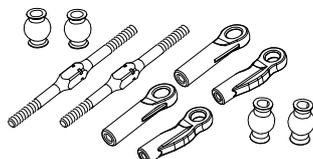


转向拉杆 (可调)
Adjustable Turnbuckle Set

71046



伺服拉杆
Servo Steering Link


71047

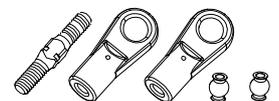

伺服拉杆 (可调)
Adjustable Servo Steering Link Set

配件表 Parts List

71048

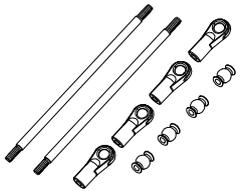

后上拉杆
Rear Camber Turnbuckle

71049




轴承钢销子 (3.5*53mm)
Pin (3.5*53mm)

71050




轴承钢销子 (3*55mm)
Pin (3*55mm)

71051

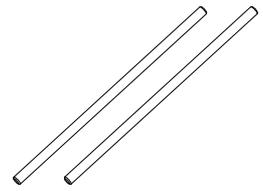


轴承钢销子 (4*110mm)
Pin (4*110mm)

71052

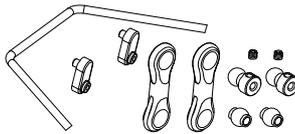

前防倾杆组
Front Sway Bar Kit


71053

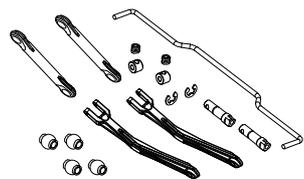

后防倾杆组
Rear Sway Bar Kit


71054

146mmx3pcs
165mmx1pcs
171.6mmx1pcs

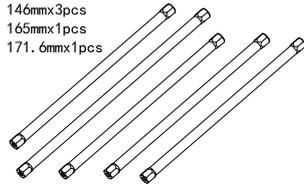


铝合金支撑杆
Alum Center Brace Bar

71055

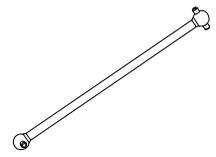


纵前传动轴
Center Dogbone Front

71056

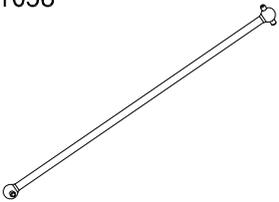


纵后传动轴
Center Dogbone Rear

71057

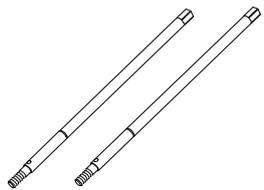


后桥传动轴
Driveshaft for Rear Portal

71058

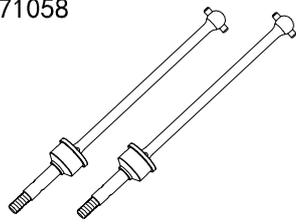


前万向轴
Universal CVD Front

71059

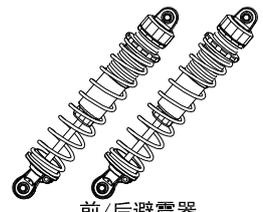


前/后避震器
Shock Set Complete (Front/Rear)

71060

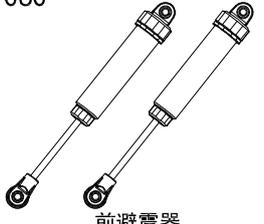


前避震器
Front Shock Set without Spring

71061

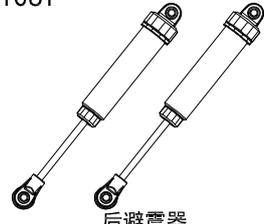

后避震器
Rear Shock Set without Spring

71062

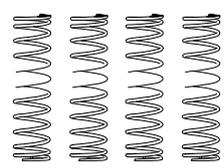


避震弹簧
Shock Spring Set

71063




避震轴长
Shock Shaft Set Long

71064

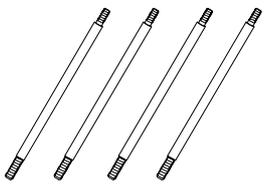

避震轴短
Shock Shaft Set Short

71065

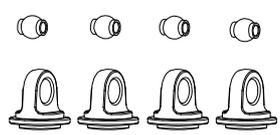


避震上球头座
Shock End Upper

71066



避震下球头座
Shock Rod End

71067

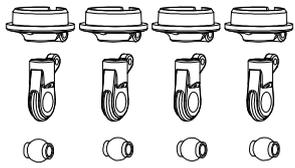

避震弹簧下座
Shock Rod End and Spring Cups

71068




避震活塞/T型套
Shock Piston/bottom retainer T tube

71069




避震X圈/气室
Shock X-Ring/Bladder

71070

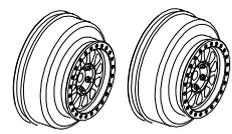

轮框
Wheel


71071

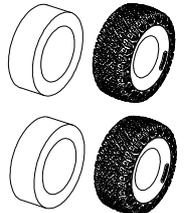

轮胎/海绵
Tires and Foam Insert


配件表 Parts List

71072

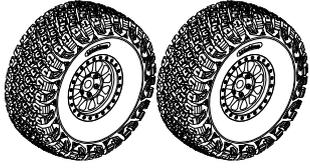


轮胎组
Wheel and Tire Mounted

71073

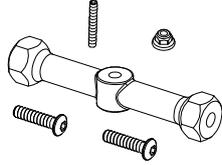


备胎固定座
Spare Tire Mount

71074

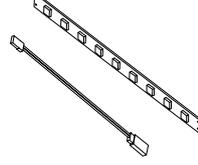


LED灯条 (白光)
LED Strip (White light)

71075

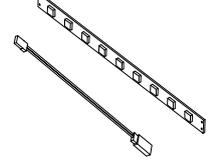


LED灯条 (黄/红光)
LED Strip (Yellow/Red light)

71076

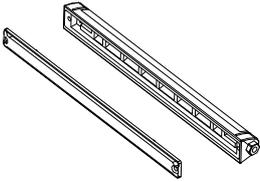


灯条固定座
Light Bar Mount

71078

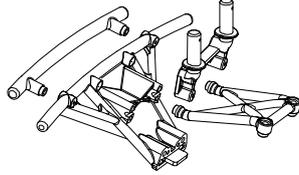


前防撞架 (短卡)
Front Bumper (SCT)

71079

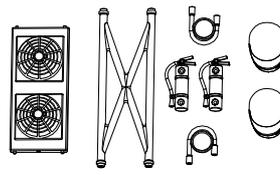


车棚配件组
Cage Parts Set

71080

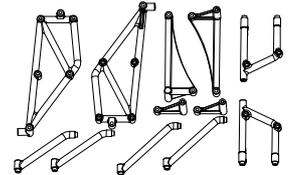


车壳中支撑 (短卡)
Body Support Center (SCT)

71081

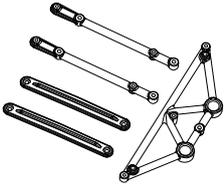


车壳前支撑 (短卡)
Body Support Front (SCT)

71082

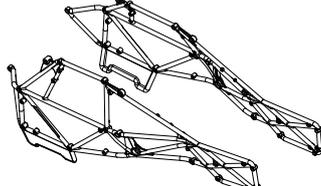


车棚左/右
Cage Left/Right

71083

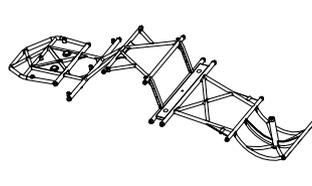


车棚中
Cage Center

71084

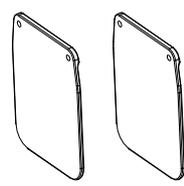


后挡泥板 (短卡)
Mud Flap Rear (SCT)

71085

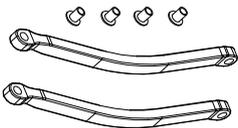


后桥限位胶条
Rear Portal Limit Strape

71086

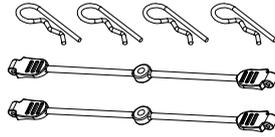


车壳夹胶条
Body Clip and Rubber Leash

71088

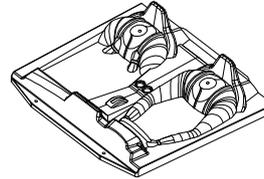


驾驶室 (PC透明)
Cockpit (PC Clear)

71089

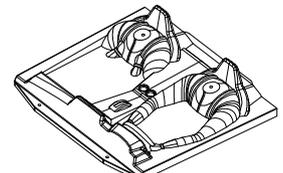


驾驶室 (PC黑色)
Cockpit (PC Black)

71090

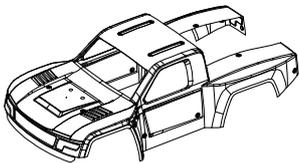

短卡车壳 (PC透明)
SCT Body (PC Clear)

71091

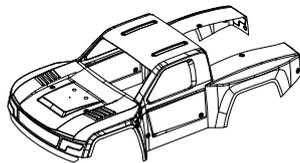


短卡车壳 (PC丝印车花)
SCT Body (PC Screened)

71094



短卡车壳组
SCT Body Set

71096

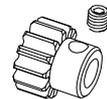

马达齿12T
Pinion Gear 12T

71097




马达齿13T
Pinion Gear 13T

71098




马达齿14T
Pinion Gear 14T

71099

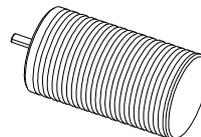

无刷马达4274
Brushless Motor 4274


71100

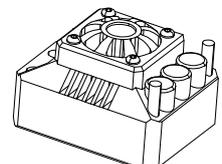

无刷电调150A
Brushless ESC 150A


配件表 Parts List

71101

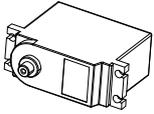

25KG小舵机
25kg Servo

71102

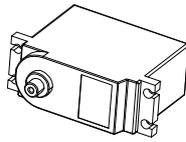

30KG大舵机
30kg Servo

71103




遥控/接收
Transmitter/Receiver

71104




接收机
Receiver

71105

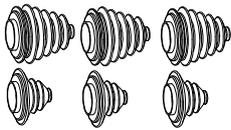


防尘套
Boots for driveshaft

71120

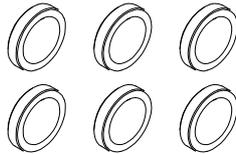


轴承24*15*5
Ball Bearing

71121

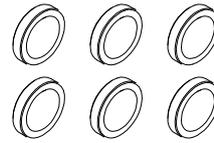


轴承21*15*4
Ball Bearing

71122

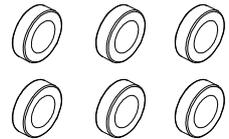


轴承13*6*5
Ball Bearing

71123

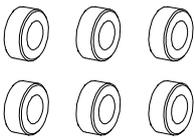


轴承10*6*3
Ball Bearing

71124

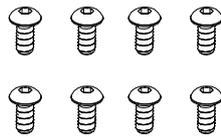

盘头内六角螺丝M3*6
Button Head Screws

71125

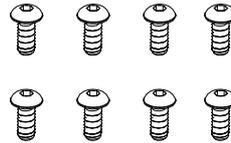


盘头内六角螺丝M3*8
Button Head Screws

71126




盘头内六角螺丝M3*10
Button Head Screws

71127

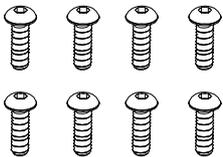


盘头内六角螺丝M3*12
Button Head Screws

71128

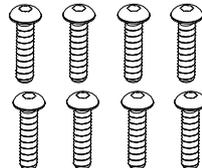


盘头内六角螺丝M3*14
Button Head Screws

71129

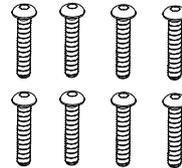


盘头内六角螺丝M3*16
Button Head Screws

71130

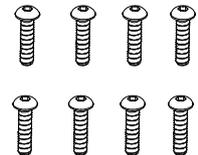


盘头内六角螺丝M3*18
Button Head Screws

71131

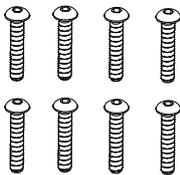


盘头内六角螺丝M3*20
Button Head Screws

71132

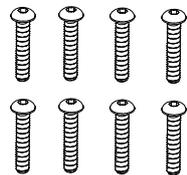


盘头内六角螺丝M3*22
Button Head Screws

71133

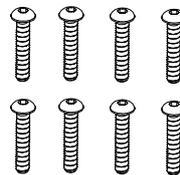


盘头内六角螺丝M3*25
Button Head Screws

71134

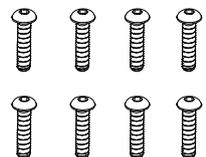


盘头内六角螺丝M2.5*12
Button Head Screws

71135

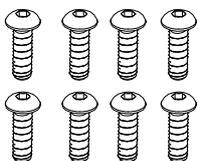


盘头内六角螺丝M4*10
Button Head Screws

71136

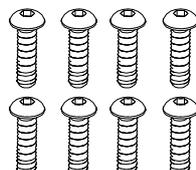


盘头内六角螺丝M4*12
Button Head Screws

71137

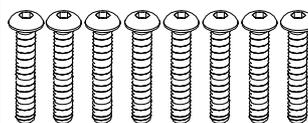

盘头内六角螺丝M4*25
Button Head Screws


71138

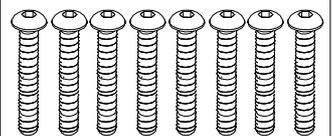

盘头内六角螺丝M4*30
Button Head Screws


配件表 Parts List

71139

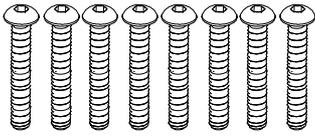

盘头内六角螺丝M4*40
Button Head Screws

71140

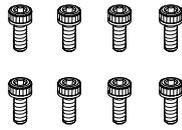

杯头内六角螺丝M2.5*6
Cap Head Screws

71141




杯头内六角螺丝M2.5*10
Cap Head Screws

71142




杯头内六角螺丝M2.5*12
Cap Head Screws

71143

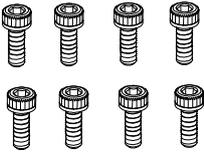


杯头内六角螺丝M3*10
Cap Head Screws

71144

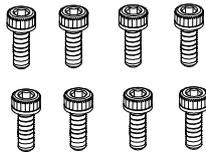

杯头内六角螺丝M3*12
Cap Head Screws

71145

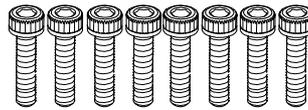


杯头内六角螺丝M4*14
Cap Head Screws

71146




杯头内六角螺丝M4*26
Cap Head Screws

71147

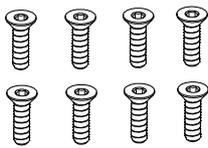


平头内六角螺丝M3*10
Flat Head Screws

71148

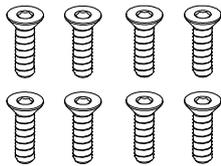


平头内六角螺丝M4*8
Flat Head Screws

71149

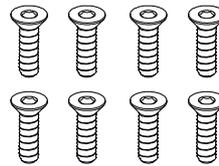


平头内六角螺丝M4*12
Flat Head Screws

71150

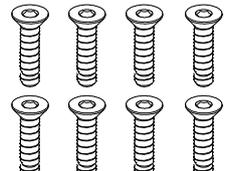


平头内六角螺丝M4*16
Flat Head Screws

71151

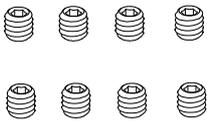


机米4*4
Headless Screws

71152

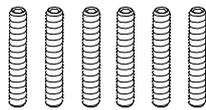


机米3*26
Headless Screws

71153

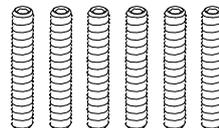

机米4*30
Headless Screws

71154

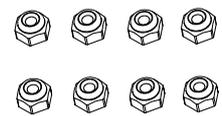


M2.5尼龙螺母
Flange Lock Nuts

71155




M3法兰螺母
Flange Lock Nuts

71156

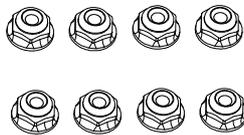


M4法兰螺母
Flange Lock Nuts

71157

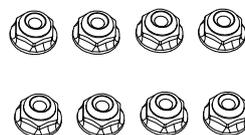


M5法兰螺母
Flange Lock Nuts

71158

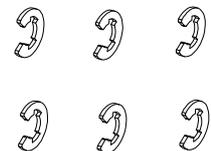


5.0E扣
E Clip

71160

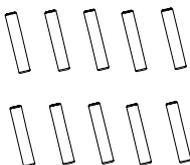


2.5*14销子
Pins

71161

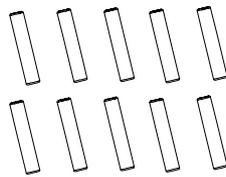


3*15销子
Pins

71162

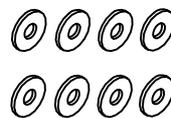

垫片6*3.1*0.5
Shims


71164

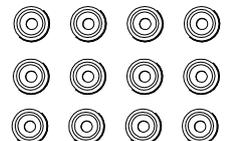

车壳螺丝垫片
Body screws washer


配件表 Parts List

72000

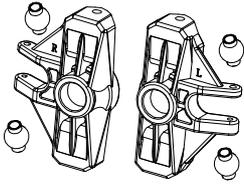


CNC铝合金转向座左/右
CNC Alum Spindle Set Left/Right

72001

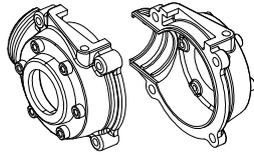


CNC铝合金后桥蛋
CNC Alum Rear Portal Housing

72002

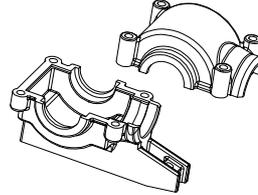


CNC铝合金前齿轮箱
CNC Alum Front/Rear Gearbox

72003

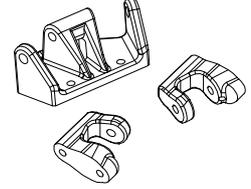


CNC铝合金后桥固定座
CNC Alum Rear Camber Block

72004

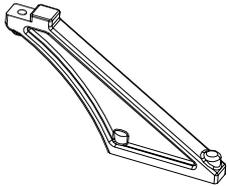


CNC铝合金前支撑
CNC Alum Front Brace

72005

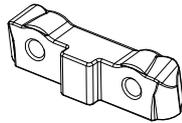


CNC铝合金前摆臂码后
CNC Alum FR Suspension Mount

72006

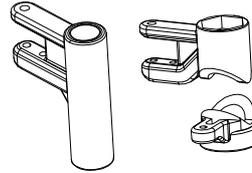


CNC铝合金缓冲座
CNC Alum Bell Crank

72007

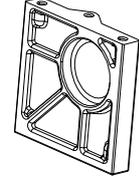


CNC铝合金中差座
CNC Alum Center Gear Diff Mount

72008

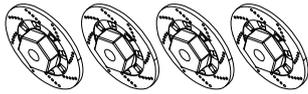


CNC铝合金六角轮座
CNC Alum Wheel Hex

72009

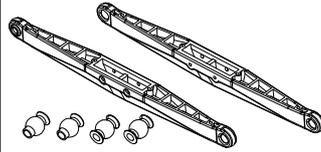


CNC铝合金后桥刀臂
CNC Alum Rear Trailing Arm

72010

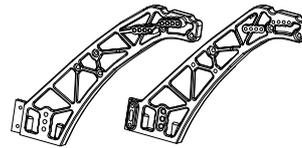


CNC铝合金后避震支撑
CNC Alum Rear Shock Tower

72011

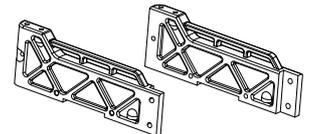


CNC铝合金底板侧支撑
CNC Alum Chassis Side Guard

72012

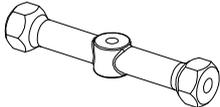


CNC铝合金备胎固定座
Alum Spare Tires Mounting

72013

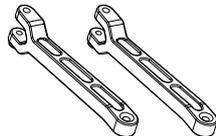

CNC铝合金后防倾杆摇臂
CNC Alum Rear Sway Bar Arm

72014

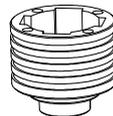


CNC铝合金差速壳
CNC Alum Differential Housing

72015




CNC铝合金舵机臂15T
CNC Alum Servo Arm 15T

72016

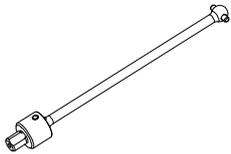


纵前万向轴
Center Front CVD

72017

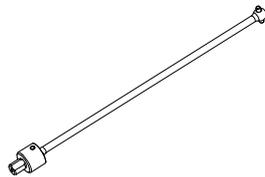

纵后万向轴
Center Rear CVD

72018

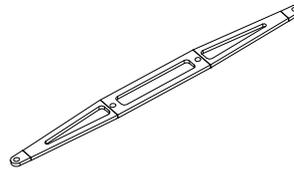

铝合金刀臂加强片
Alum Trailing Arm Strengthen Plate